


MAIN RELIEF VALVE (CONT'D)

Testing And Adjusting The Main Relief Valve (Cont'd)

For Machines Equipped With Joystick And Without Rear Auxiliary Hydraulics

Figure 20-20-10

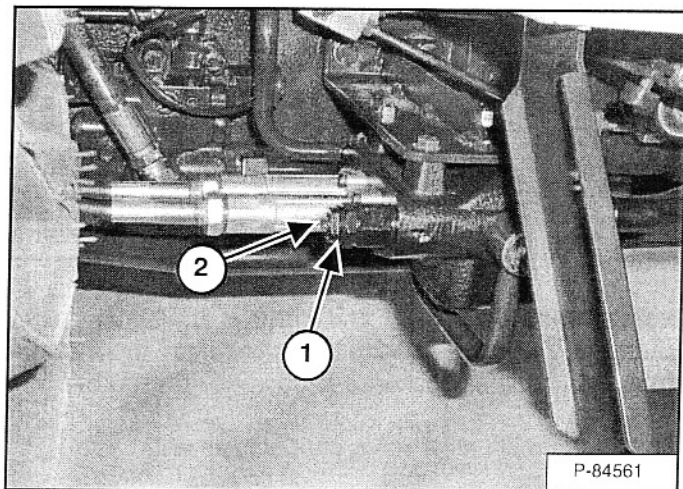

Loosen the nut (Item 1) and turn the adjustment screw (Item 2) **[Figure 20-20-10]** clockwise to increase pressure, counter clockwise to decrease pressure.

Retest the main relief valve after adjustment.