

Bleed Fuel System



CAUTION:




X9811-UN-23AUG88

Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Seal for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.


If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed v a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledge medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

1. Fuel tank must be full of fuel.
2. **IMPORTANT:** To avoid injection pump damage, **DO NOT** attempt to start the engine while bleeding the system.

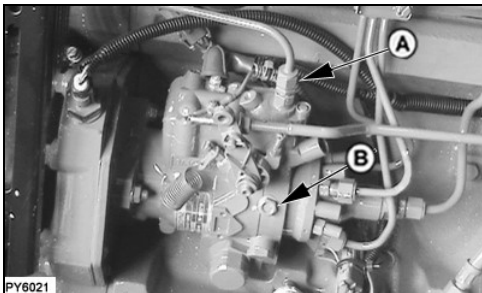

PY6021-UN-28JUL06

Fuel Injection Pump

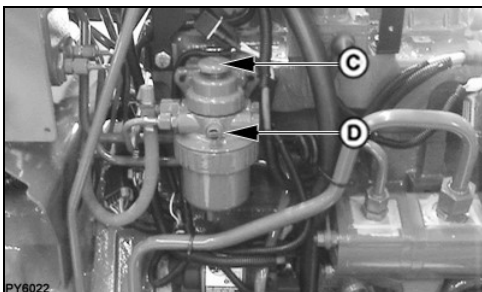

PY6022-UN-28JUL06

Fuel Filter

A - Fuel Return Line

B - Bleed Screw

C - Priming Pump

D - Bleed Screw

Loosen fuel return line (A). Loosen filter base bleed screw (D). Push priming pump (C) until fuel runs smoothly without spiting, then tighten bleed screw (D).

3. Loosen injection pump bleed screw (B) . Push priming pump (C) until fuel runs out smoothly without spitting, then tighten fuel return line (A) and bleed screw (B).

SA61034,0000275-19-200

Copyright © 2013 Deere & Company.
All Rights Reserved.

[About Our Site](#) | [Site Search](#) | [Contact Us](#) | [Privacy and Data](#)
[Connect with Us on](#)