


Engine External Components—Left-Hand Side

220
05
2

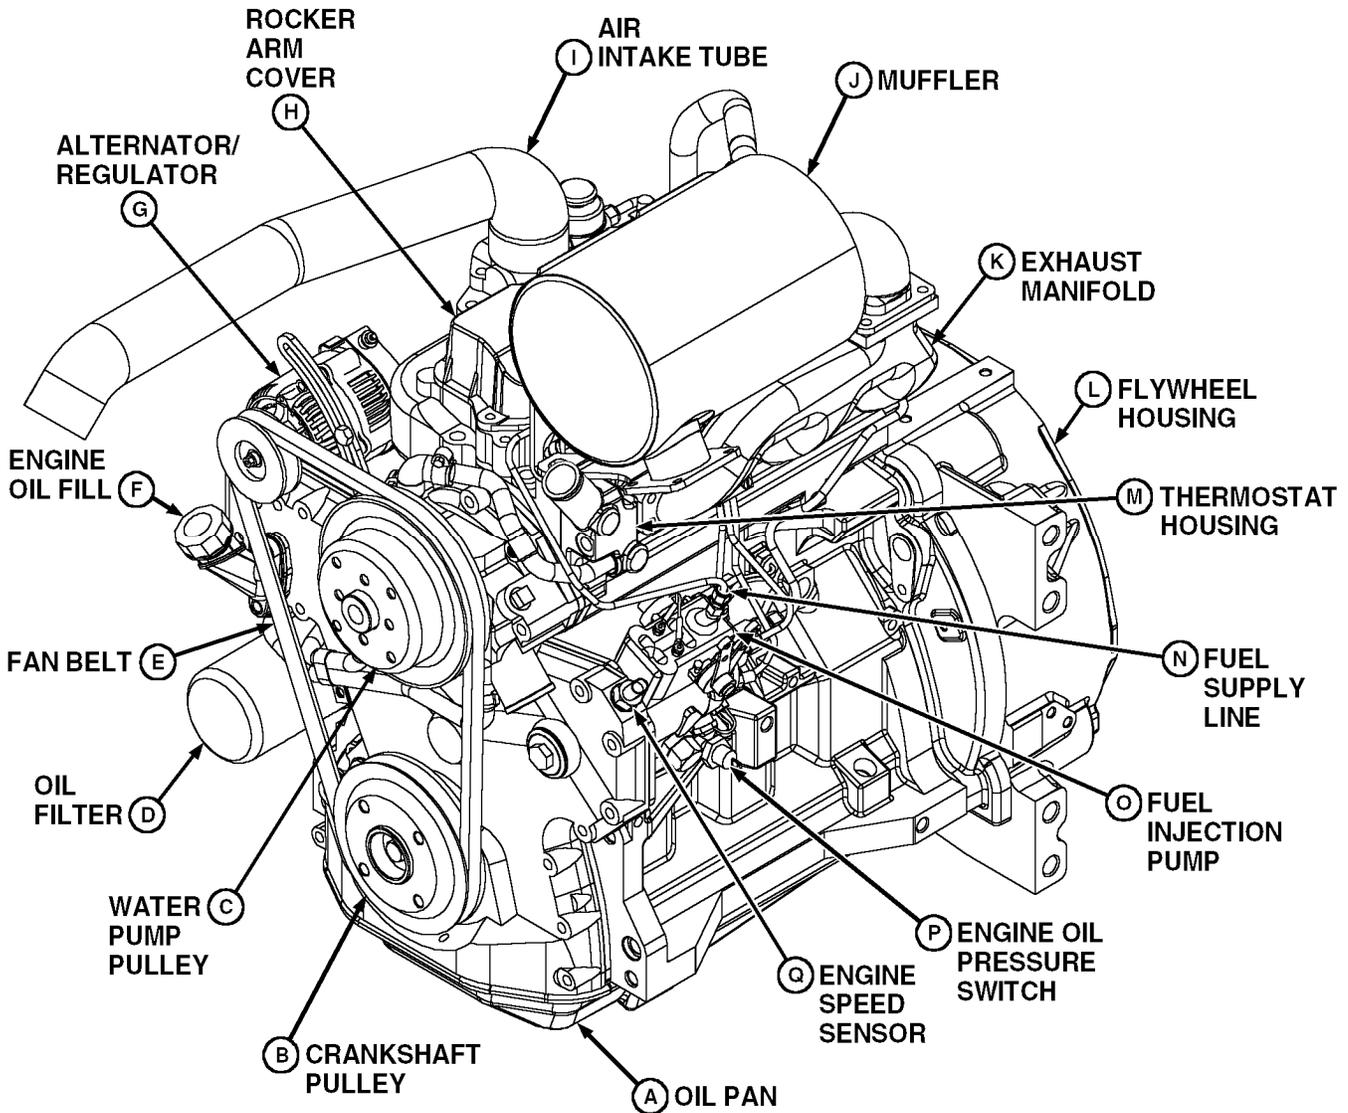

LV4441

ENGINE EXTERNAL COMPONENTS — LEFT-HAND SIDE

Slide LV4441

- | | | | |
|---------------------|------------------------|----------------------|------------------------------|
| A—Oil Pan | F—Engine Oil Fill | J—Muffler | N—Fuel Supply Line |
| B—Crankshaft Pulley | G—Alternator/Regulator | K—Exhaust Manifold | O—Fuel Injection Pump |
| C—Water Pump Pulley | H—Rocker Arm Cover | L—Flywheel Housing | P—Engine Oil Pressure Switch |
| D—Oil Filter | I—Air Intake Tube | M—Thermostat Housing | Q—Engine Speed Sensor |
| E—Fan Belt | | | |

LV4441 -19-05DEC99