


Replace Rear PTO Switch

1. Disconnect wiring connector (A).
2. Remove two screws (B) and nuts (D).
3. Replace rear PTO switch (C).
4. Install mounting hardware and tighten securely.
5. Connect wiring connector.

A—Wiring Connector
B—Screw (2 used)
C—Rear PTO Switch
D—Nut (2 used)

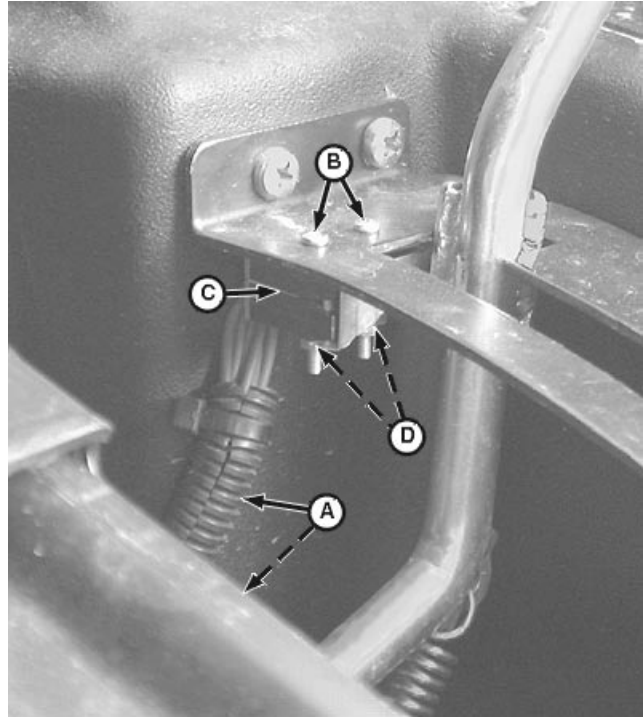

LV4504 -UN-07DEC99


AG,OUO1023,346 -19-01NOV99-1/1

Replace Park position Start Switch

NOTE: Seat removed for clarity of photo.

1. Disconnect wiring connector (A).
- NOTE: Apply petroleum jelly to O-ring before installing new Park position start switch.*
2. Replace Park position start switch and O-ring (B).
 3. Connect wiring connector.

A—Wiring Connector
B—Park position Start Switch

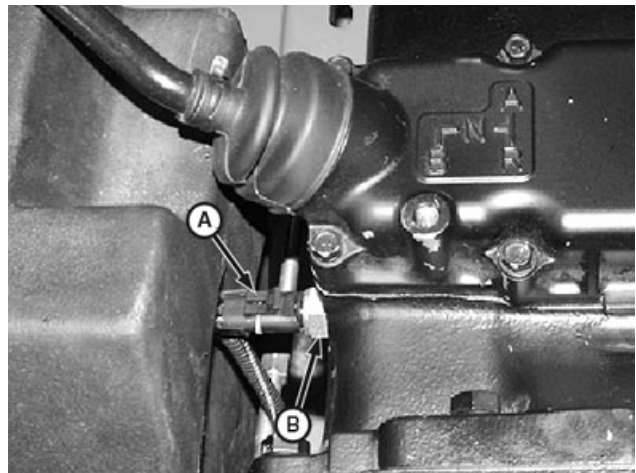

Left Side of Transmission Housing Shown

LV4425 -UN-13OCT99

AG,OUO1023,263 -19-06OCT99-1/1