


## Remove, Inspect, and Install Hydraulic Oil Pick-Up Screen

**NOTE:** The approximate capacity of transmission is 33 L (8.7 U.S. gal).

1. Drain transmission/hydraulic oil.
2. Disconnect left side brake linkage rod (A).
3. Remove cap screws (B) and cover (C).
4. Remove screen and inspect for damage. Replace if necessary.
5. Clean undamaged pick-up screen in solvent and blow dry with compressed air.
6. Install pick-up screen into differential case.
7. Install cover (C) and cap screws (B). Tighten cap screws to specification.

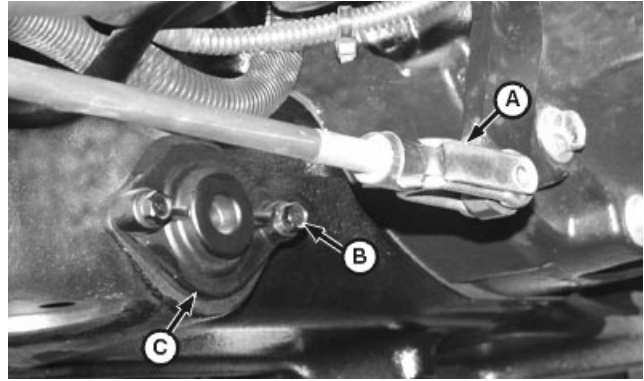

A—Left Side Brake Linkage Rod  
 B—Cap Screw (2 used)  
 C—Cover

### Specification

Pick-Up Screen Cover Cap ..... 23 N•m (204 lb-in.)  
 Screws Torque

8. Connect brake linkage rod (A).
9. Fill transmission with proper oil. (See Section 10, Group 20.)

LV4265 -UN-21SEP99

AG,OUO1008,182 -19-24SEP99-1/1