


5. ELECTRIC CIRCUIT INSPECTION

5.1 ENGINE PREHEATING, ENGINE STARTING AND CHARGING

5.1.1 CIRCUIT DIAGRAM

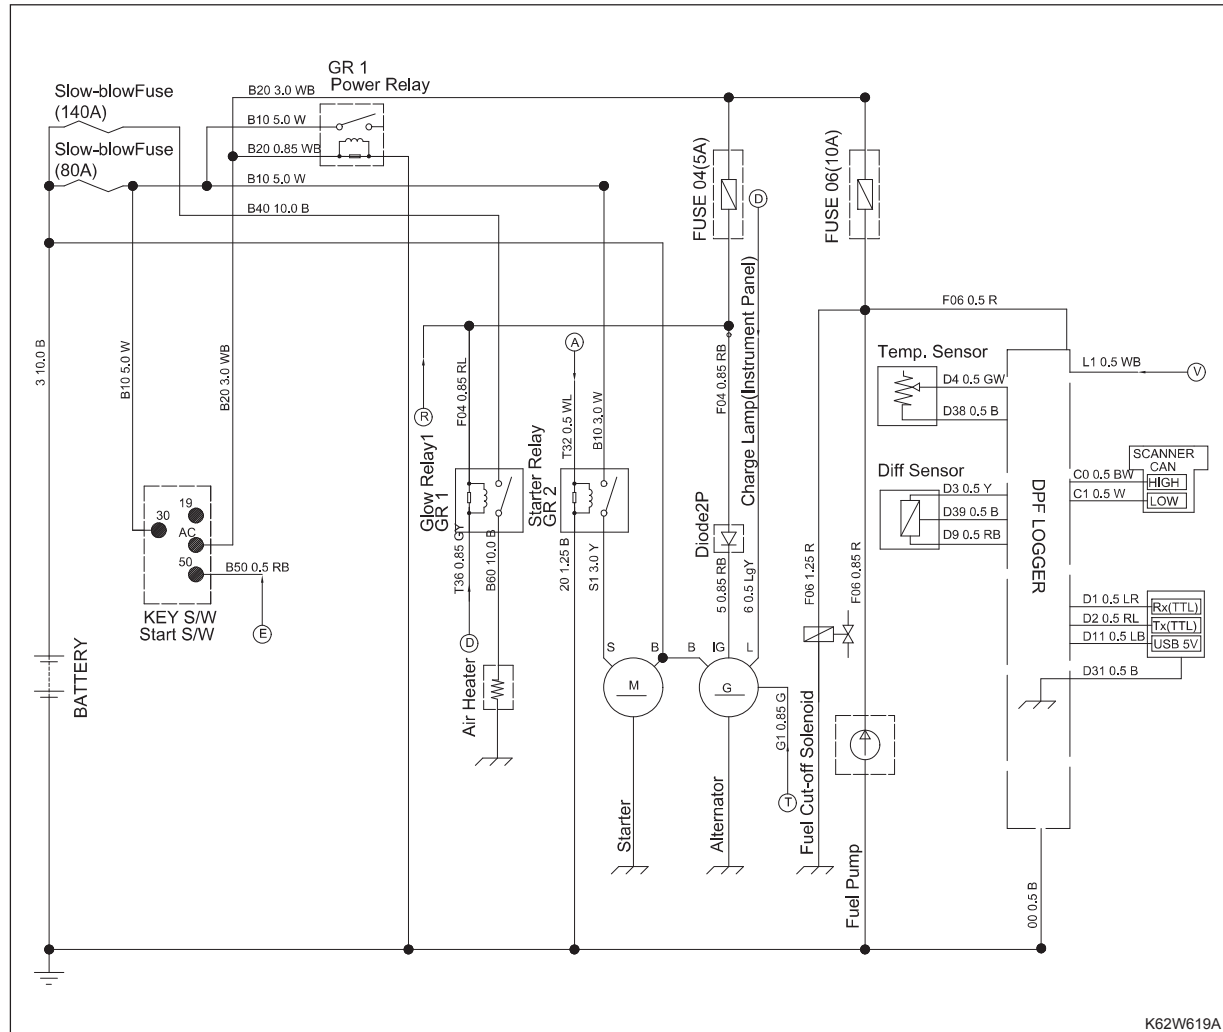

The engine can be started by turning the ignition switch to the ON position from the OFF position while the shuttle shift switch is in the neutral position and the PTO switch is in the OFF position.

NOTES

INSPECTION PROCEDURE

1. Check that the FR switch is in the neutral position and the PTO switch is turned OFF.
2. Turn the ignition switch to the ON position.
 - Check that the preheat indicator on the instrument cluster is turned on.
 - Check that the neutral indicator on the instrument cluster is turned on.
 - Check that the charging indicator on the instrument cluster is turned on.
3. After the preheat indicator is turned off, depress the clutch pedal and turn the ignition switch to the START position.
4. When the engine is started, release the ignition key. Check the charging indicator on the instrument cluster goes off.