


REPLACE MID PTO NEUTRAL START SWITCH—870/970/1070

1. Remove mid PTO linkage cover.
2. Disconnect rods (E and G).
3. Disconnect wiring connector. Remove grommet (B).
4. Remove cap screws (A and D). Remove cover (F).
5. Replace switch (C) and O-ring.
6. Install cover. Tighten cap screws to specifications.
7. Connect wiring connector and rods.
8. Install grommet and linkage cover.

TORQUE SPECIFICATIONS

Cap Screws (A)	90 N·m (65 lb-ft)
Cap Screws (D)	50 N·m (35 lb-ft)

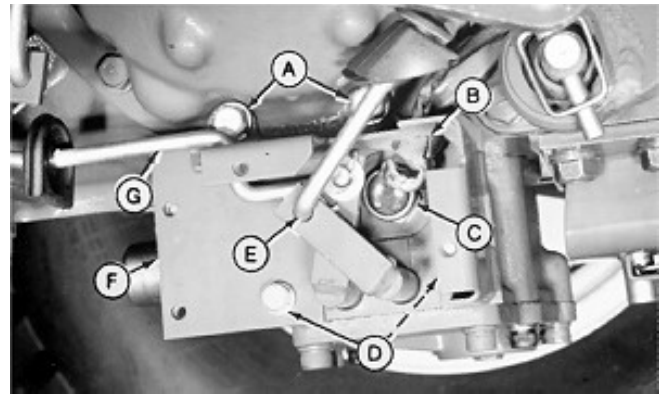

- A—Cap Screws
- B—Grommet
- C—Neutral Start Switch
- D—Cap Screws
- E—Turnbuckle Rod
- F—Inner Cover
- G—Spring Capsule Rod

M53179 -UN-12FEB90

40
15
3

MX,4015DG,A6 -19-15JUN89

REPLACE KEY SWITCH

1. Remove dash cover.
2. Disconnect two wiring connectors.
3. Turn retainer (A) counterclockwise to remove washer and switch.
4. Install switch, washer and retainer.
5. Connect wiring connectors and install lower dash panel.



M53191 -UN-18JUL89

MX,4015DG,A7 -19-15JUN89