



**[IMPORTANT]**

- BEFORE STARTING THE ENGINE, RECONNECT THE HOSE REMAINING ON THE TRACTOR TO THE BOTTOM HYDRAULIC LINE WITH QUICK COUPLER AS SHOWN.

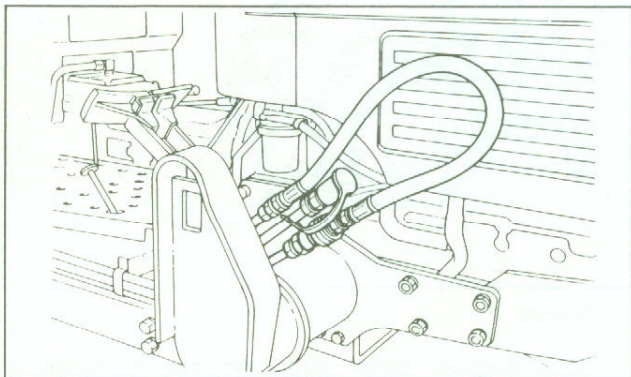


- (13) Place a protective cap on the remaining exposed quick coupler ends.
- (14) Start the engine and slowly back the tractor away from the loader.

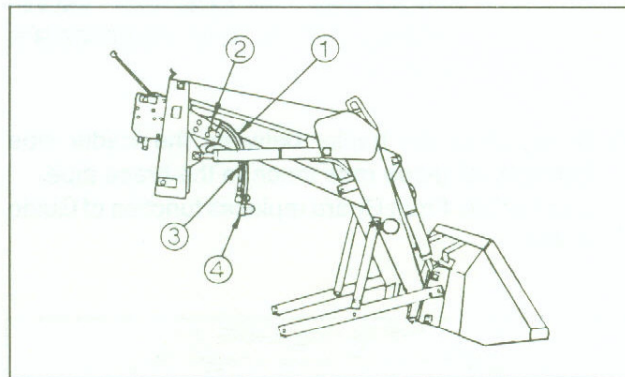

- ① Hose 7      ② Hose 5 (Shorter hose)  
 ③ Hose 6      ④ Plug

## 8. STORING THE LOADER

- (1) Store Loader in a dry place if possible.
- (2) Attach protection covers in the couplers or connect delivery hose with return hose to protect from dust.

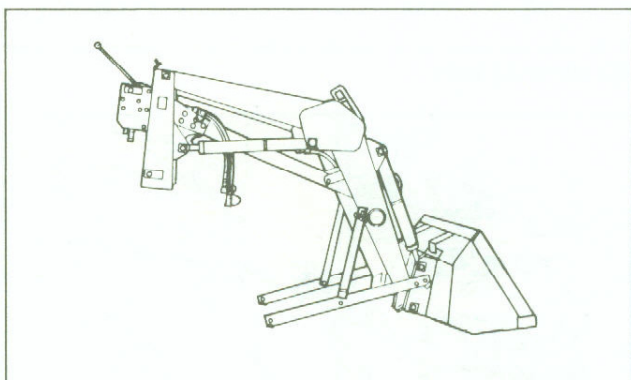

- (3) Check hydraulic hose and connections. Repair or replace if necessary.
- (4) Repair or replace any worn, damaged or missing parts.

- (5) Lubricate complete loader as described on page 21.
- (6) Apply a coat of grease to all exposed cylinder rods to prevent rusting.
- (7) Repaint the parts worn or scratched.