



Adjusting VHT Neutral Spring

1. Park the vehicle on a flat place.
2. Set the parking brake.
3. Shift the range gear shift lever to the neutral position.
4. Lock the hydraulic lift cylinder lever and hydraulic outlet lever to **"NEUTRAL"** position with restricting plate (if equipped).
5. Start the engine.
6. Make sure that the rotation speed of the engine returns to the idling rotation immediately when taking the foot off the pedal, after depressing the speed control pedal several times. If the above does not occur immediately, check the speed control cable, if cable movement is not smooth, replace the new one. If cable is OK, adjust the neutral spring tension (length of tension bolt).

(1) [Neutral Spring](#)