

INITIAL SETUP (CONT'D)

Assembly (Cont'd)

Hydraulic Component Installation (CT2025, CT2035 And CT2040) (See Figure 40 for CT2535 and CT2540 Hydraulic Component Installation).

BH 76 Backhoe (Cont'd)

Remove the seat assembly.

See the compact tractor's Operation & Maintenance Manual and Operator's Handbook for detailed information.

NOTE: The information below is for adding the backhoe hydraulic components.

Figure 38


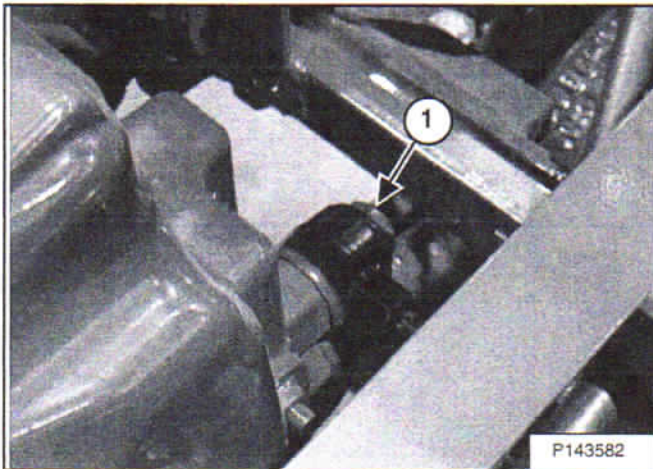



Figure 39

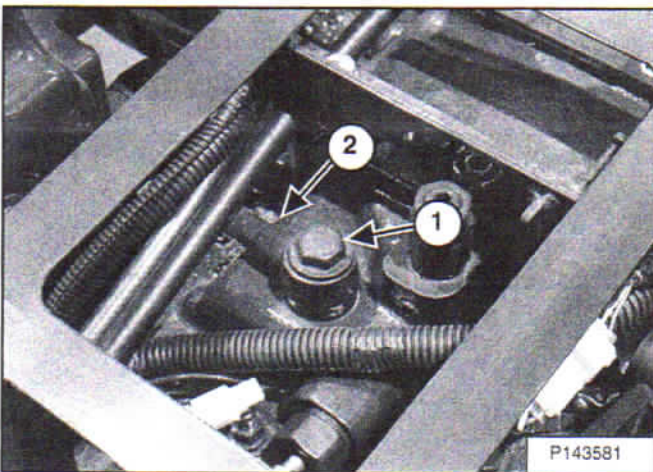

Remove the fitting (Item 1) [Figure 38] and [Figure 39].


Remove the tubeline (Item 2) [Figure 39].

Figure 40

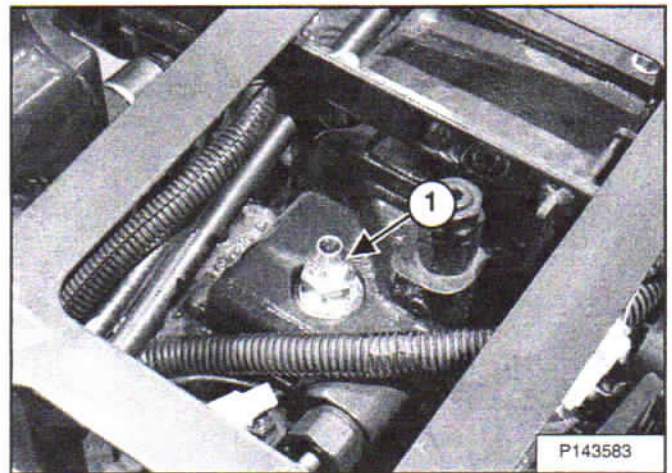

Install the fitting (Item 1) [Figure 40].

Figure 41

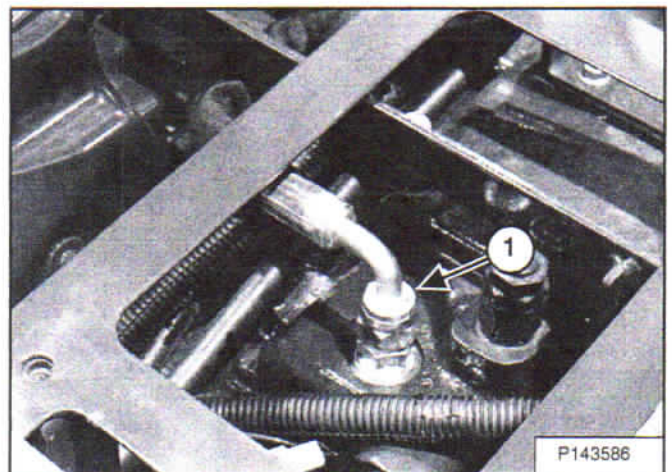

Install the 90° end (Item 1) [Figure 41] of the hose with the yellow coupler cover (as shown).

Route the hose out the back of the tractor.

INITIAL SETUP (CONT'D)


Start and check for leaks.

Assembly (Cont'd)

Hydraulic Component Installation (CT2025, CT2035 And CT2040) (Cont'd)

BH 76 Backhoe (Cont'd)

Figure 42

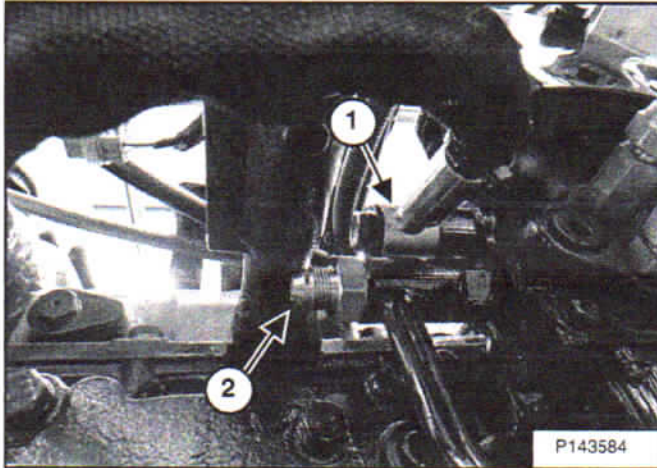


Install the hose (Item 1) [Figure 42] with the red coupler cap (as shown).

Route the hose out the back of the tractor.

Remove the plug and install the fitting (Item 2) [Figure 42].

Figure 43

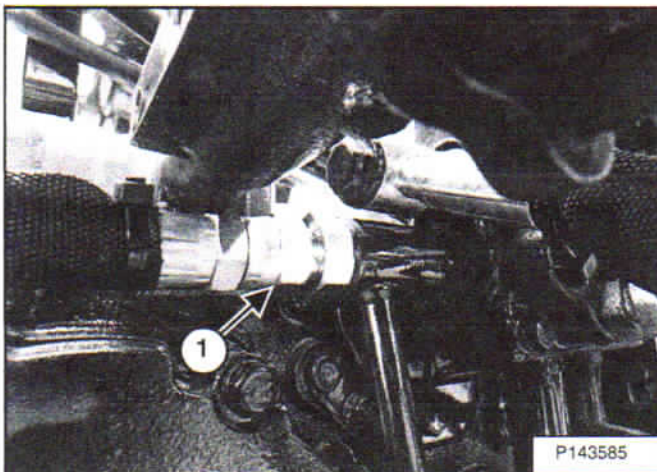

Install the hose (Item 1) [Figure 43] with the blue coupler cap (as shown).

Route the hose out the back of the tractor.

Reinstall the seat assembly.