



## 4.6 FRONT/REAR SCV VALVE

### 4.6.1 FRONT SCV VALVE (MEC MODEL)

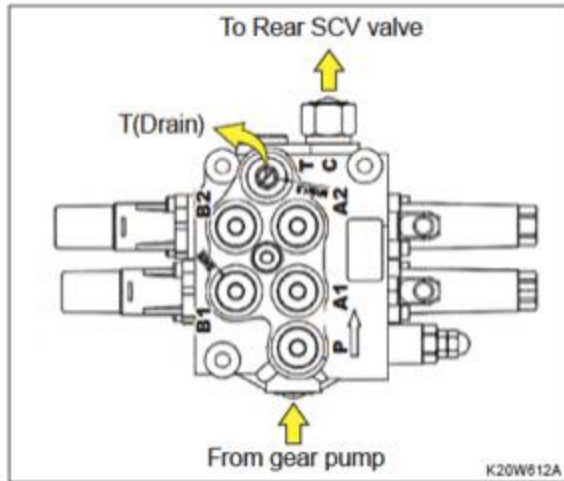


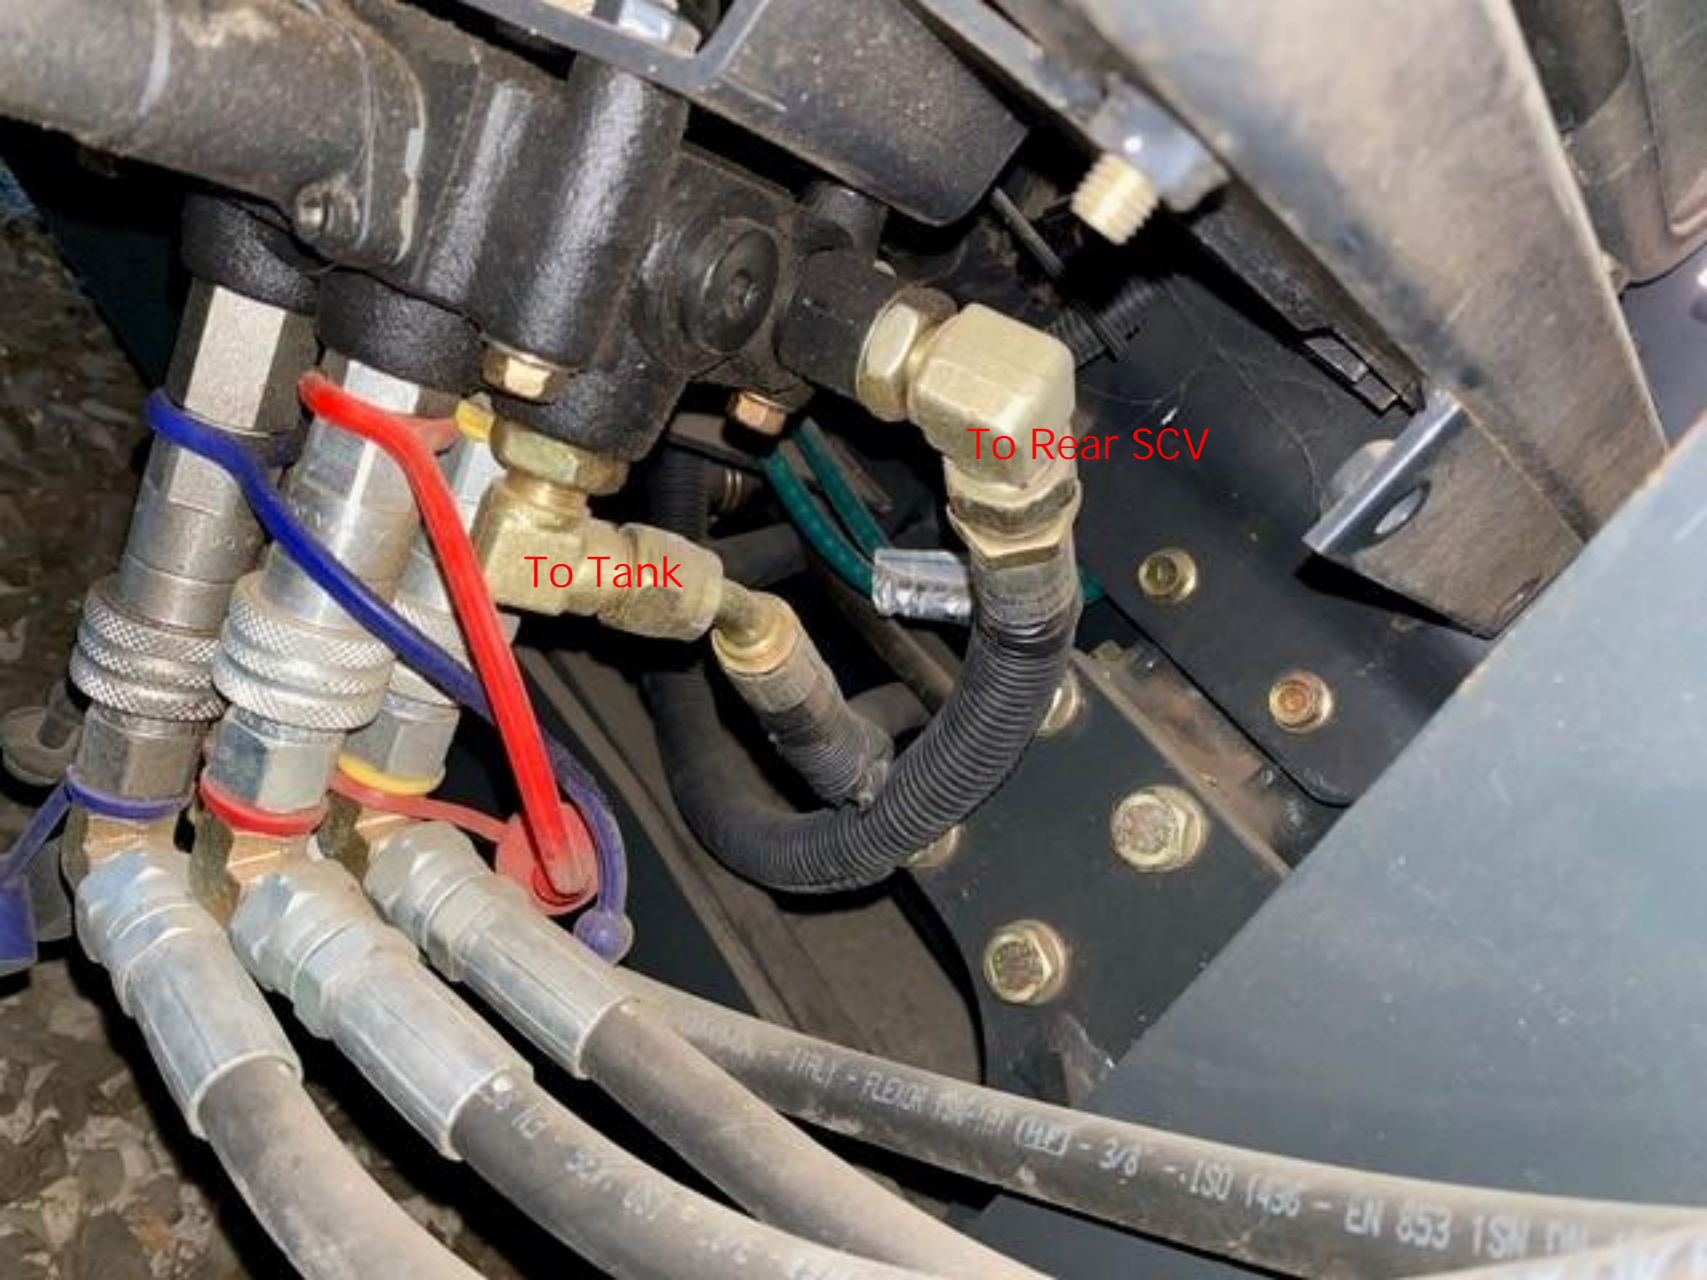

To Rear SCV

To Tank



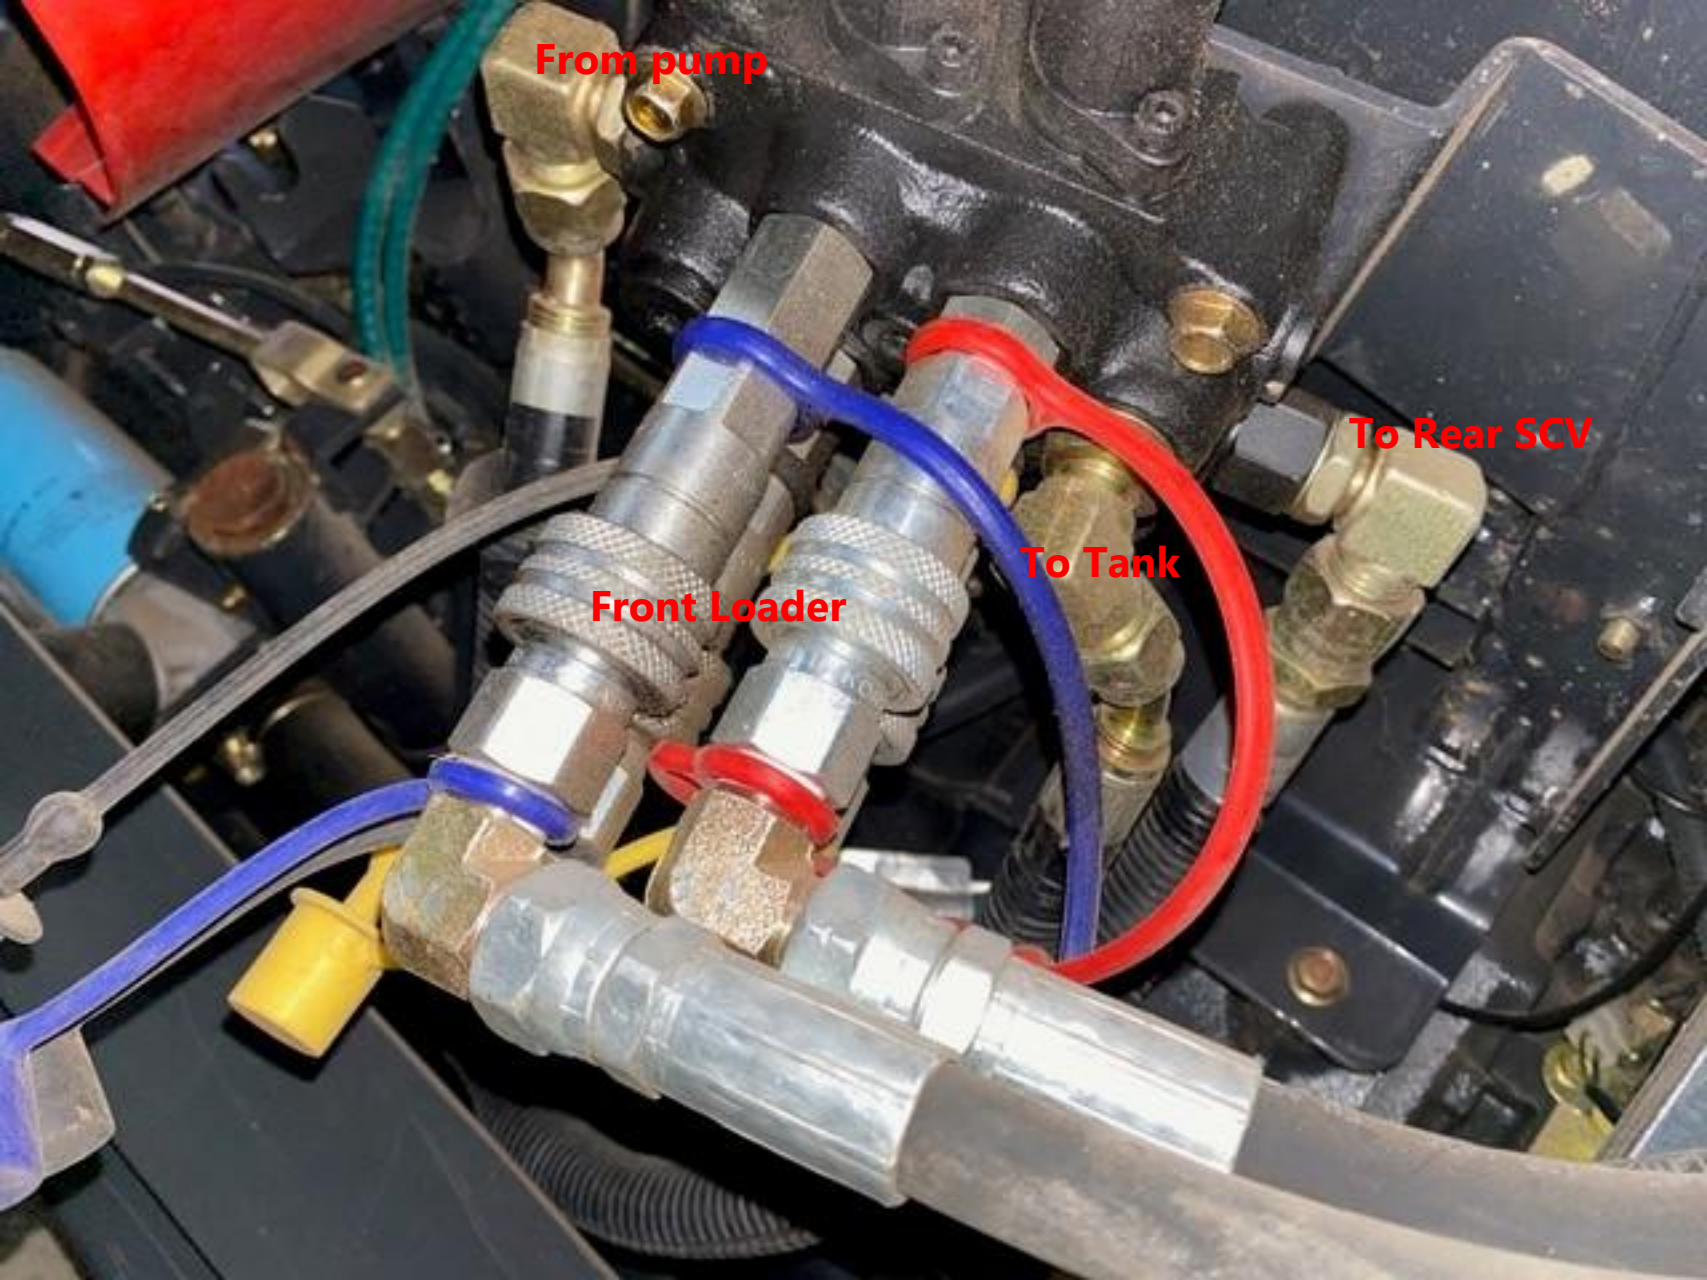

From pump

To Rear SCV

To Tank

Front Loader



# Standard Loader Valve Configuration with Summit Valve Installed with Backhoe, Rear Remotes, Ect.

