

## 2.2 FUSE AND FUSIBLE LINK

## 2.2.1 FUSE INSPECTION AND REPLACEMENT

1. Remove the cover from the fuse box.
2. Check each fuse. Replace any damaged fuse with a new fuse with the same capacity.



## MAIN FUSE BOX



6	20A 전조등 HEAD LAMP	예비 SPARE		
7	10A 릴레이 RELAY, HORN	10A		
8	5A 전자제어장치 ECU	예비 SPARE	5A 엔진컨트롤러 ENGINE CONTROL	1
9	10A 방향지시등 TURN SIGNAL	예비 SPARE	10A 엔진센서 ENGINE SENSOR	2
10	15A 유압 밸브 SOLENOID VALVE	15A	10A 비상등 HAZARD LAMP	3
11	15A 작업등 WORK LAMP	예비 SPARE	10A 전자유압 EHL	4
12	10A 컨트롤러 CONTROLLER	20A	10A 파워셔틀 POWER SHUTTLE	5

## CAPACITY &amp; FUNCTION

No.	Fuse	Descriptions
1	5A	Engine control
2	10A	Engine sensor
3	10A	Hazard lamp
4	10A	EHL
5	10A	Power shuttle
6	20A	Head lamp
7	10A	Relay, horn
8	5A	ECU
9	10A	Turn signal lamp
10	15A	Solenoid valve
11	15A	Work lamp
12	10A	Controller



## CAUTION

- If fuses for a certain function blow up frequently, do not replace it with other metal wires or aluminum foil. Contact a near dealer or service center and have it serviced.
- Make sure to use only fuses with the rated capacity. Otherwise, it can lead to fire, machine damage and injury.