


## CLUTCH SYSTEM (CONT'D)

### Adjusting

Figure 201

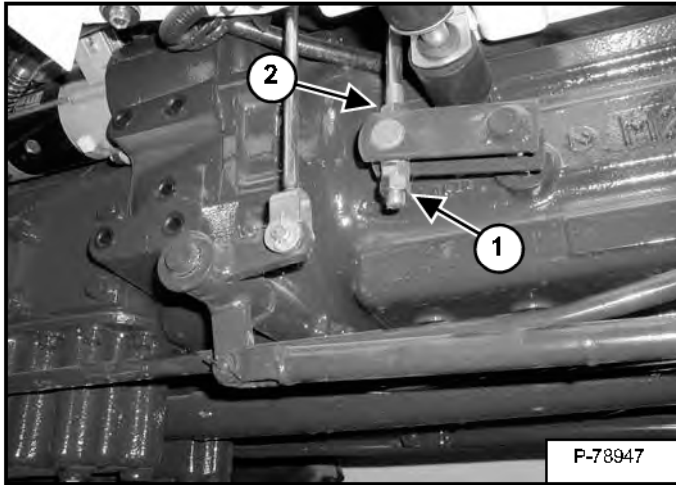

The adjustment linkage for the clutch pedal is located under the left floor plate.

To adjust the clutch pedal free travel, loosen the lock nut (Item 1) [Figure 201].


Turn the nut (Item 2) [Figure 201] up or down to change the clutch pedal travel.

When the clutch pedal has been set to the correct free travel, tighten the lock nut (Item 1) [Figure 201].

**NOTE:** If the clutch pedal free travel can not be properly set, the clutch will need to be serviced. See your Bobcat dealer for service.

## Draining Water From Clutch Housing

Figure 202

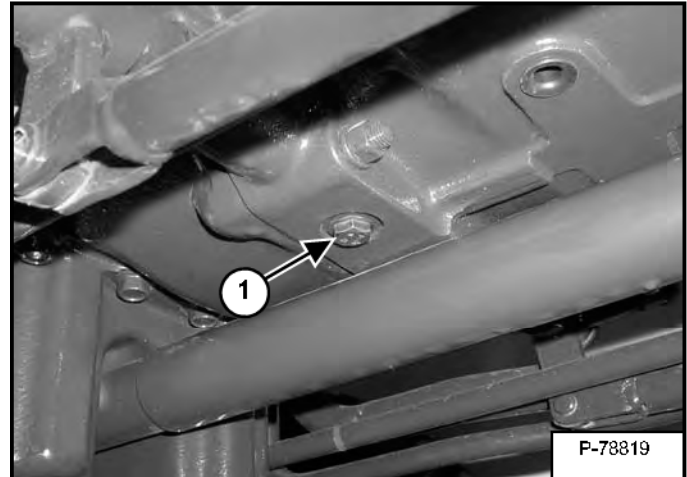

See the SERVICE SCHEDULE for the correct service interval. (See SERVICE SCHEDULE on Page 131.)

Water can collect in the clutch housing after rain, snow or washing the compact tractor. Drain the clutch housing after any of these conditions.

Remove the plug (Item 1) [Figure 202] from the bottom of the clutch housing. Drain the water into a container and recycle or dispose of in an environmentally safe manner.

Reinstall the plug.

## IMPORTANT

Clutch damage may occur if the plug is not reinstalled. Dirt and debris could enter clutch housing through open drain hole.

I-2267-0807