

Diagnostic Trouble Codes

Trouble Code List

- [s27 - F2 / P0401 / EGR airflow error too low](#)
- [s27 - F2 / P0402 / EGR airflow error too high](#)
- [s27 - F3, F4, F5, F11, F16 / P0403 / EGR H-Bridge driver fault](#)
- [s27 - F8 / P0404 / EGR position control fault](#)
- [s27 - F4 / P0405 / EGR position sensor low fault](#)
- [s27 - F3 / P0406 / EGR position sensor high fault](#)
- [s27 - F2 / P046D / EGR position sensor noise fault](#)
- [s27 - F10, F31 / P0C18 / EGR position learning fault](#)
- [s29 - F31 / P2138 / Hand Pedal Correlation track 1 over track 2 fault](#)
- [s29 - F31 / P060E / Hand pedal signal fault](#)
- [s29 - F31 / P2120 / Hand pedal signal track 1 fault](#)
- [s29 - F31 / P2125 / Hand pedal signal track 2 fault](#)
- [s51 - F7 / P02E1 / ACV control fault](#)
- [s51 - F3 / P02E9 / ACV position signal high fault](#)
- [s51 - F4 / P02E8 / ACV position signal low fault](#)
- [s51 - F11 / P02EB / ACV driver fault\(curret\)](#)
- [s51 - F5 / P02E0 / ACV driver open circuit](#)
- [s51 - F16 / P02FA / ACV driver fault\(etc\)](#)
- [s51 - F4 / P02E2 / ACV driver short circuit to Ground](#)
- [s51 - F3 / P02E3 / ACV driver short circuit to Battery](#)
- [s51 - F18 / P02FA / ACV driver fault\(etc\)](#)
- [s51 - F10 / P02E7 / ACV learning position fault](#)
- [s81 - F0 / P2458 / DPF overload fault](#)
- [s81 - F7 / P2463 / DPF plugged fault](#)
- [s81 - F11 / P242F / DPF fault triggers reduced torque](#)
- [s91 - F31 / P2135 / Foot Pedal Correlation track 1 over track 2 fault](#)
- [s91 - F31 / P060D / Foot pedal signal fault](#)
- [s91 - F31 / P0120 / Foot pedal signal track 1 fault](#)
- [s91 - F31 / P0220 / Foot pedal signal track 2 fault](#)
- [s94 - F11 / P0088 / Rail pressure control fault](#)
- [s97 - F3, F4 / P2264 / Water in fuel sensor fault](#)
- [s97 - F2, F11 / P2269 / Water in fuel detect](#)
- [s100 - F2 / P0522 / Engine oil pressure fault](#)
- [s105 - F3 / P0113 / Intake Manifold Temp sensor high fault](#)
- [s105 - F4 / P0112 / Intake Manifold temp sensor low fault](#)
- [s105 - F2 / P0114 / Intake Manifold temp sensor noise fault](#)
- [s105 - F2 / P0111 / Intake Manifold temp sensor plausability fault](#)
- [s106 - F3, F4 / P0106 / Intake Manifold Absolute Pressure sensor signal drift fault](#)
- [s106 - F3 / P0108 / Intake Manifold Absolute Pressure sensor signal high fault](#)