

s106 - F4 / P0107 / Intake Manifold Absolute Pressure sensor signal low fault  
s108 - F3 / P2229 / Atmospheric pressure sensor high fault  
s108 - F4 / P2228 / Atmospheric pressure sensor low fault  
s110 - F2 / P0116 / Coolant sensor plausibility fault  
s110 - F2 / P0119 / Coolant sensor gradient fault  
s110 - F3 / P0118 / Coolant sensor high fault  
s110 - F4 / P0117 / Coolant sensor low fault  
s110 - F31 / P0115 / Coolant sensor fault(global)  
s132 - F31 / P0100 / AMF fault (global)  
s132 - F0, F1 / P0101 / AMF plausibility fault  
s132 - F3 / P0103 / AMF sensor high fault  
s132 - F4 / P0102 / AMF sensor low fault  
s157 - F11 / P0002 / IMV control fault  
s157 - F10 / P0087 / Rail Pressure build normal fault  
s157 - F11 / P0089 / Rail Pressure Control Error During 'RVD-Only' control  
s157 - F1 / P0093 / Rail Pressure Sensor signal drop fault  
s157 - F2 / P0190 / Rail Pressure Sensor signal grad fault  
s157 - F3, F4, F11, F31 / P0191 / Rail Pressure sensor fault(global)  
s157 - F4 / P0192 / Rail Pressure Sensor signal low fault  
s157 - F3 / P0193 / Rail Pressure Sensor signal high fault  
s168 - F3 / P0563 / Battery voltage high fault  
s168 - F4 / P0562 / Battery voltage low fault  
s172 - F2 / P0074 / Inlet Air Temp sensor signal gradient fault  
s172 - F3 / P0073 / Inlet Air Temp sensor signal high fault  
s172 - F4 / P0072 / Inlet Air Temp sensor signal low fault  
s173 - F31 / P242A / DPF In temp sensor fault(global)  
s173 - F3 / P242D / DPF In temp sensor high fault  
s173 - F4 / P242C / DPF In temp sensor low fault  
s173 - F2 / P242E / DPF In temp sensor noise fault  
s173 - F2 / P242B / DPF In temp sensor plausibility fault  
s173 - F0 / P2428 / Exhaust over temperature fault  
s174 - F2 / P0181 / Fuel temp sensor gradient fault  
s174 - F3 / P0183 / Fuel temp sensor high fault  
s174 - F4 / P0182 / Fuel temp sensor low fault  
s629 - F12 / P060B / ADC circuit fault (global)  
s630 - F11 / P0602 / Injector code fault  
s630 - F2 / P0605 / ECU memory integrity fault - code  
s630 - F2 / P0603 / ECU memory integrity fault - data / calibration  
s630 - F2 / P0604 / ECU memory integrity fault - RAM  
s630 - F11 / P062F / ECU non volatile memory fault  
s636 - F2 / P0371 / Crank signal early fault