

[s636 - F2 / P0374 / Crank signal lost fault](#)  
[s636 - F2 / P0372 / Crank signal missing fault](#)  
[s636 - F2, F11 / P0335 / Crank over speed/gap lost fault](#)  
[s637 - F1 / P0341 / Cam signal drift fault](#)  
[s637 - F10 / P0340 / Cam signal learn fault](#)  
[s651 - F5, F6 / P0201 / Injector 1 Circuit fault](#)  
[s651 - F31 / P0261 / Injector1 resistance low fault](#)  
[s651 - F31 / P0262 / Injector1 resistance high fault](#)  
[s651 - F31 / P029A / Injector drift fault detection on Injector 1.](#)  
[s651 - F31 / P029B / Injector 1 MDP value low fault](#)  
[s652 - F5, F6 / P0202 / Injector 4 Circuit fault](#)  
[s652 - F31 / P0264 / Injector4 resistance low fault](#)  
[s652 - F31 / P0265 / Injector4 resistance high fault](#)  
[s652 - F31 / P029E / Injector drift fault detection on Injector 4.](#)  
[s652 - F31 / P029F / Injector 4 MDP value low fault](#)  
[s653 - F5, F6 / P0203 / Injector 2 Circuit fault](#)  
[s653 - F31 / P0267 / Injector2 resistance low fault](#)  
[s653 - F31 / P0268 / Injector2 resistance high fault](#)  
[s653 - F31 / P02A2 / Injector drift fault detection on Injector 2.](#)  
[s653 - F31 / P02A3 / Injector 2 MDP value low fault](#)  
[s654 - F5, F6 / P0204 / Injector 3 Circuit fault](#)  
[s654 - F31 / P0270 / Injector3 resistance low fault](#)  
[s654 - F31 / P0271 / Injector3 resistance high fault](#)  
[s654 - F31 / P02A6 / Injector drift fault detection on Injector 3.](#)  
[s654 - F31 / P02A7 / Injector 3 MDP value low fault](#)  
[s654 - F31 / P1303 / no MDP updates occur fault 2](#)  
[s654 - F31 / P1311 / no MDP updates occur fault 1](#)  
[s675 - F3, F5, F6, F31 / P2687 / Fuel Heater Driver fault](#)  
[s676 - F5 / P0380 / GP relay open circuit fault](#)  
[s676 - F4 / P0383 / GP relay short circuit to ground fault](#)  
[s676 - F3 / P0384 / GP relay short circuit to source fault](#)  
[s677 - F31 / P0615 / Starter motor relay global driver](#)  
[s677 - F3, F5 / P0617 / Starter motor control relay - Open Circuit/Short Circuit to battery detected](#)  
[s677 - F4 / P0616 / Starter motor control relay - Short Circuit to Ground detected](#)  
[s731 - F11 / P0325 / Accelerometer 1 fault](#)  
[s731 - F11 / P0330 / Accelerometer 2 fault](#)  
[s1076 - F5 / P0001 / IMV driver signal open circuit fault](#)  
[s1076 - F3, F4, F16, F18 / P0002 / IMV control fault](#)  
[s1076 - F4 / P0003 / IMV control feedback low fault](#)  
[s1076 - F3 / P0004 / IMV control feedback high fault](#)  
[s1076 - F31 / P0254 / IMV current trim drift fault](#)