

**Power Trac
PT-1845**

Filter Installation Instructions

After replacing filter element the following procedure needs to be done to remove any air trapped in the case.

Remove plug or hose and remove the wire from the kill solenoid or spark plugs to prevent engine from firing. Crank the engine until all the air is removed. Replace plug or hose and reconnect wires. Please note this port is also used to check the charge pressure of the tram circuit.

The following diagram shows the location of this port:

