

1. Remove the transmission oil filter (1). Use a filter wrench, if required.
2. Make sure the original filter gasket has been completely removed.
3. Clean the filter adapter.
4. Lubricate the gasket on the new filter with clean hydraulic oil.
5. Install the new transmission oil filter until the gasket contacts with the adapter and tighten additional 2/3 turn by hand. Do not use a filter wrench to install the filter.
6. Install the drain plug.
7. Fill the system with clean transmission oil. See specifications for the correct type of oil.
8. Start the tractor and let idle several minutes while operating the hydraulic controls.

IMPORTANT:

If the hydraulic system does not operate correctly after the transmission oil has been changed or after long term storage, see your dealer.

9. Stop the engine and lower the 3-point linkage.
10. Check the oil level. Add transmission oil as necessary.
11. Check for leaks and repair as necessary.

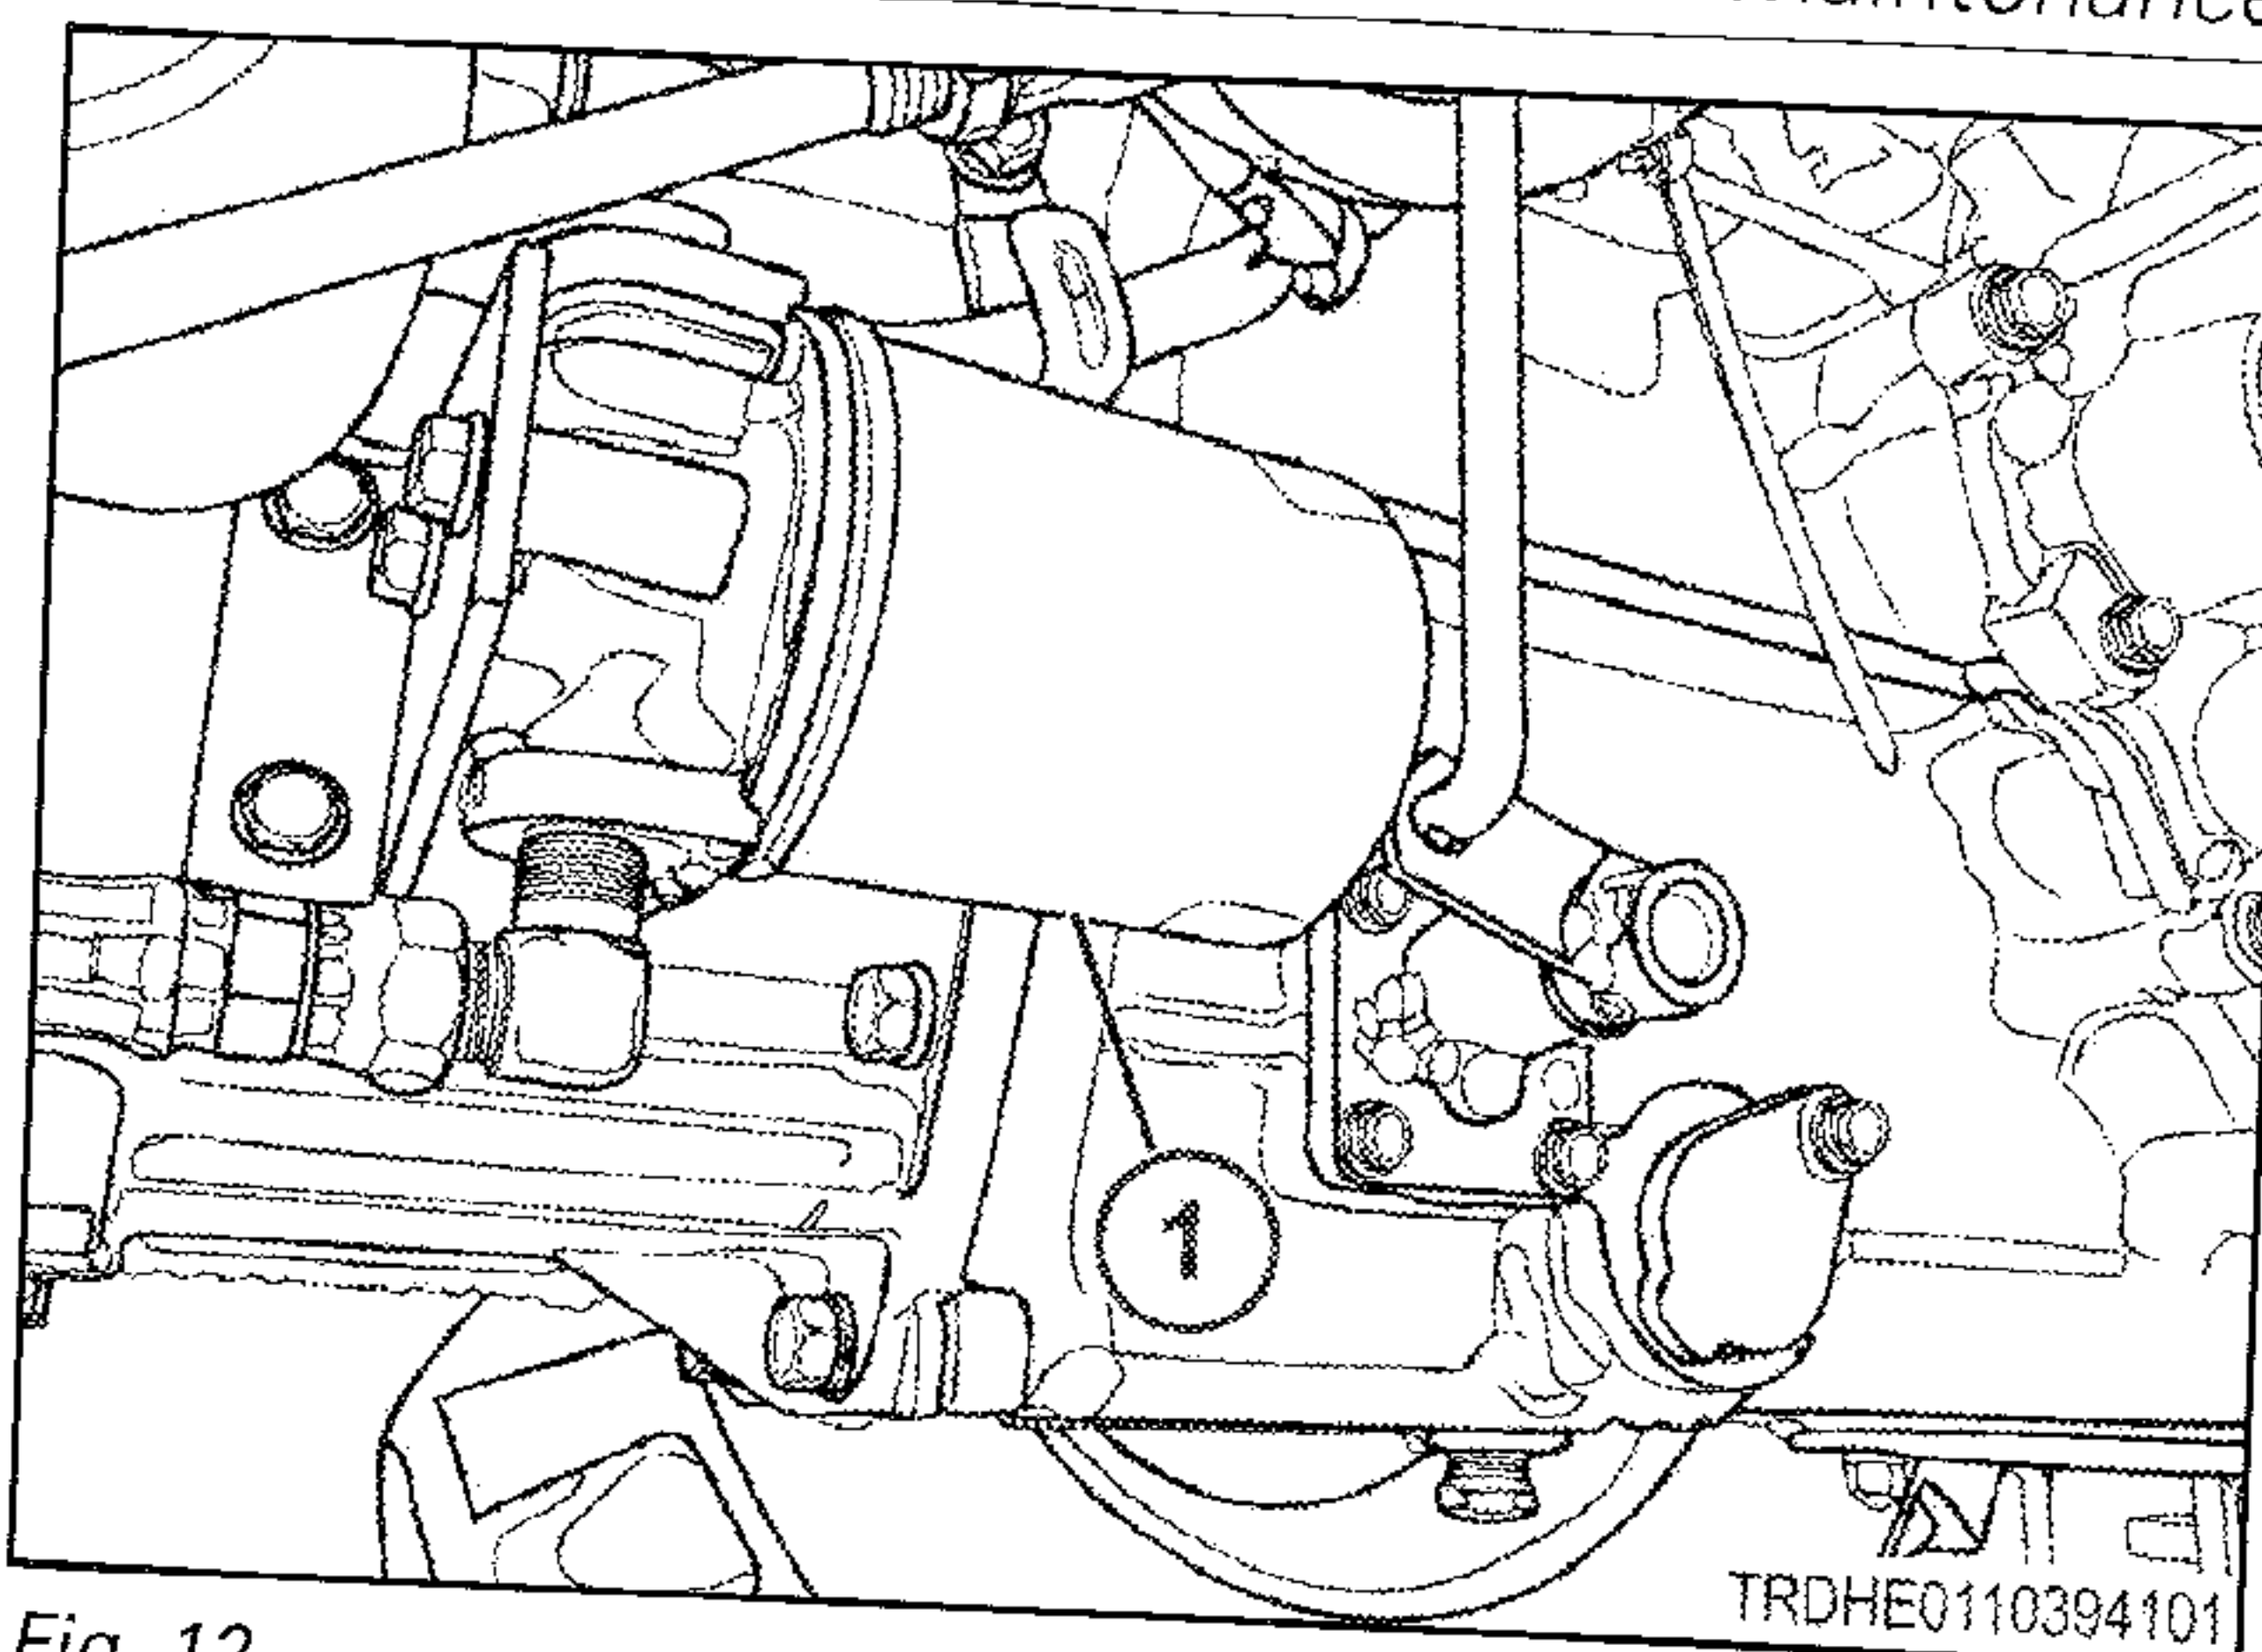


Fig. 12