


**HAZARD FLASHER/TURN SIGNAL CONTROL MODULE**

The hazard flasher/turn signal control module, 1, is located underneath the steering column mounting bracket. The control module controls current flowing to the hazard flasher/turn signal lights on the rear fenders. Refer to the chart below for the functions of the control module.

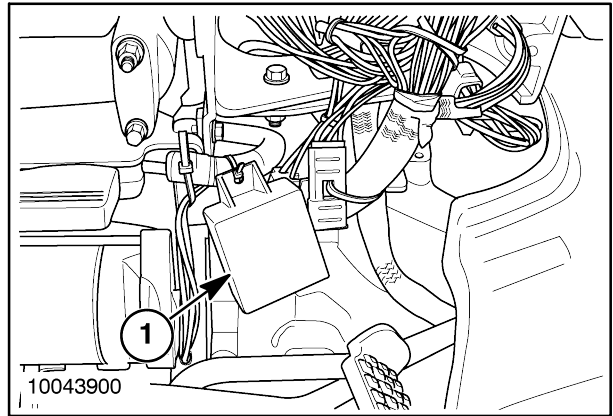

HAZARD/TURN SIGNAL SWITCH POSITION	RESULT
Hazard switch "On"	Both flashers blink in unison.
Left turn signal "On"	Left flasher and taillight blink and right flasher and taillight remain solid.
Right turn signal "On"	Right flasher and taillight blink and left flasher and taillight remain solid.