

FUSE BLOCK

The fuse block is located on the right-hand side of the engine compartment fire wall. Always replace blown fuses with the size specified for that circuit.

From top to bottom as viewed from the front of the tractor, the fuse block contains the following fuses:

	Fuse Size	Circuit Protected
1	7.5 amp	Fuel Solenoid/Rear PTO Switch
2	7.5 amp	Instrument Panel Gauges
3	20 amp	Main Light Switch
4	15 amp	Rear Work Light/H.S.T. Cruise Control
---	---	---
5	15 amp	Rear Hazard Flasher Lights
---	---	---

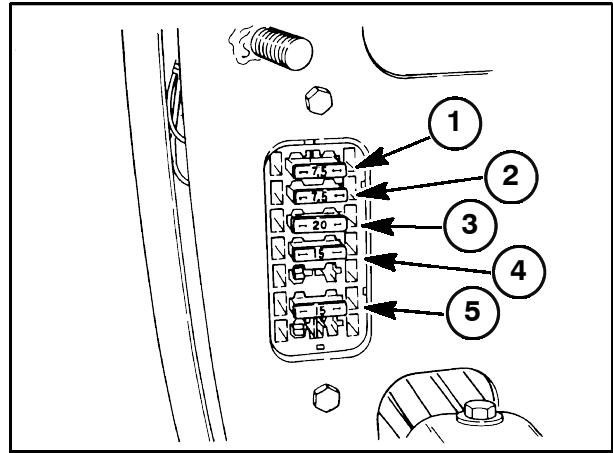


Figure 3-34

MAIN FUSE

The main fuse is a 30 amp fuse, 1, located on the left-hand side of the engine and positioned in the area of the engine starter. This fuse protects the tractor's entire electrical system.

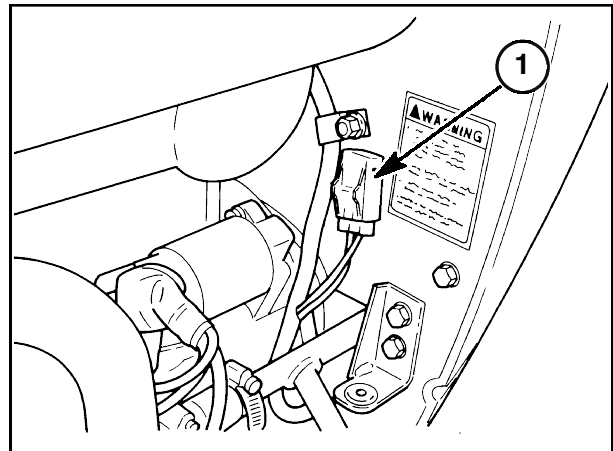


Figure 3-35

To replace the main fuse:

1. Unplug the connector to expose the fuse.
2. Remove the old fuse from the fuse holder and replace.

IMPORTANT: Always replace this fuse with a similar 30 amp fuse; DO NOT increase amperage rating.

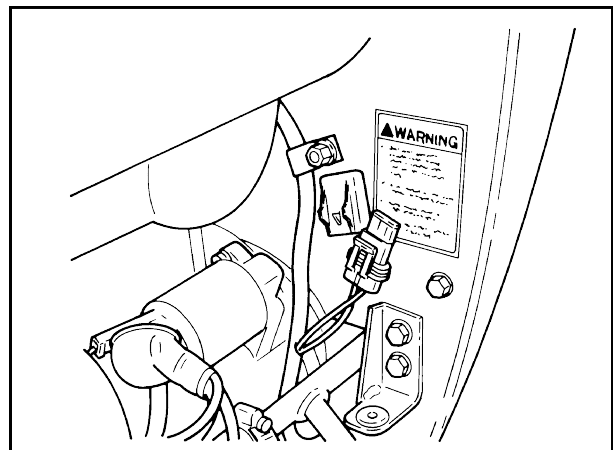


Figure 3-36