

GLOW PLUGS

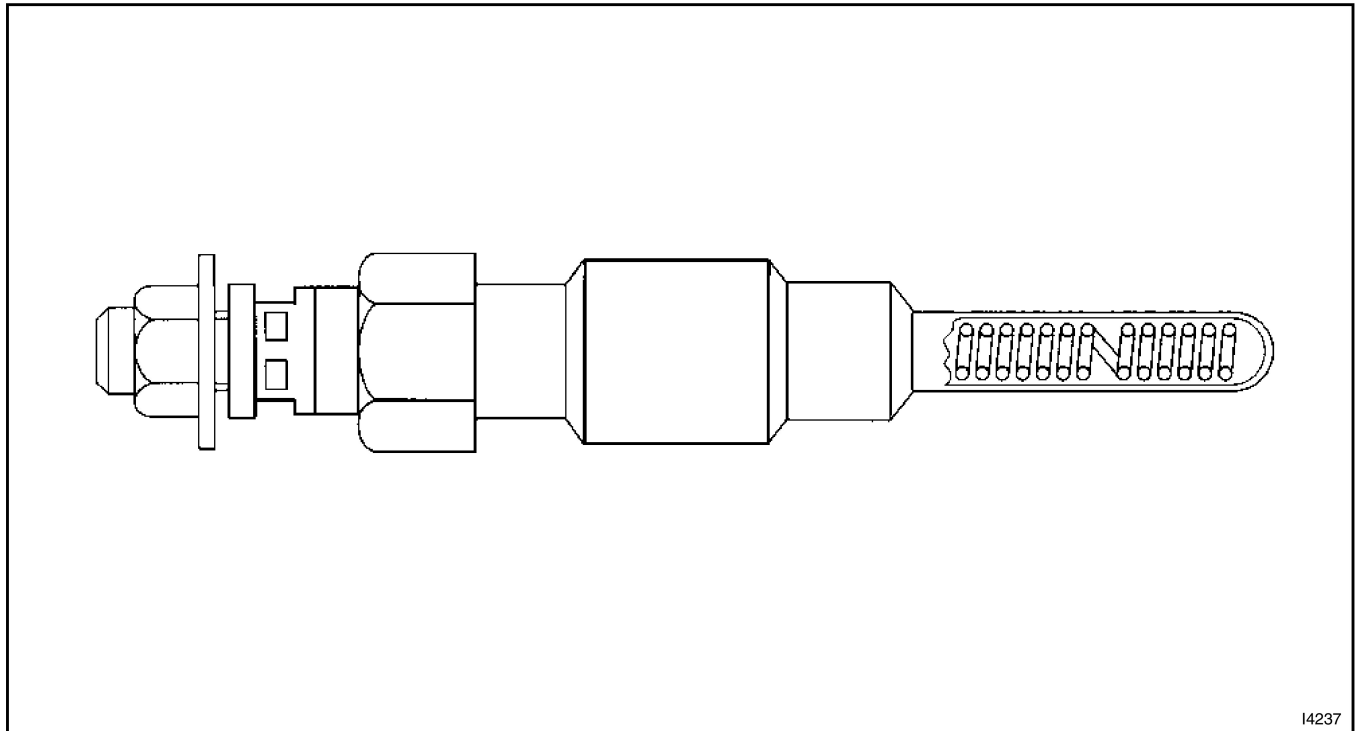


FIG. 236

FIG. 236: Sectional view.

Removal, Inspection, and Re-Assembly

FIG. 237: Troubleshooting.

Removal

Remove the connector by loosening the glow plug nut installed on the cylinder head.

Remove the glow plug.

Inspection

Check for continuity across the sheath and center electrode. If there is no resistance, it indicates a short circuit, so replace the glow plug. If the resistance is infinite, it shows that pre-heating coil is burnt out, so replace the glow plug.

Re-Installation

Install the glow plug.

Install the nut on the glow plug and connect the connector.

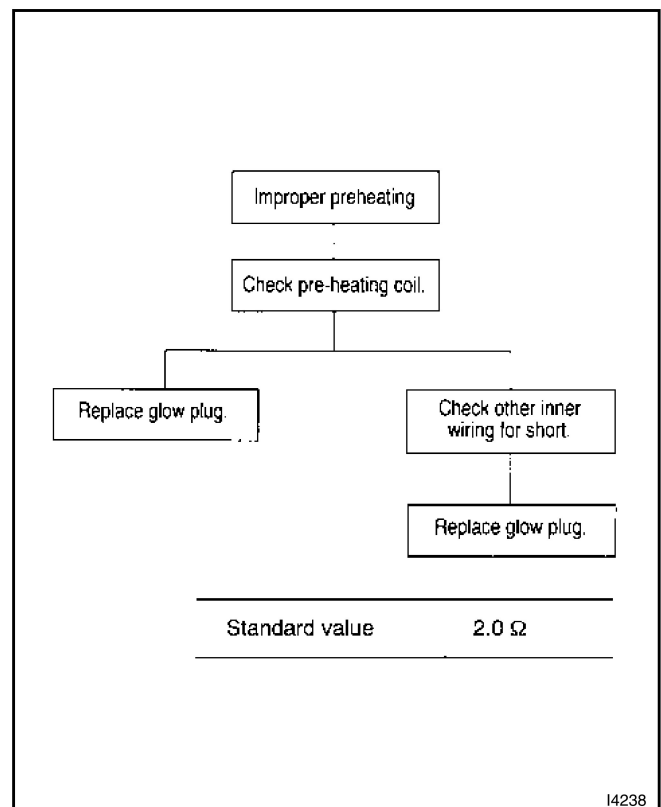


FIG. 237