
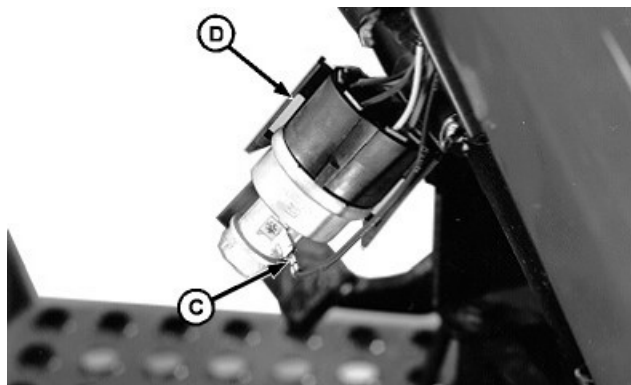


Replace Key Switch

*NOTE: Tractor equipped with tilt steering wheel shown.
Tractors without tilt steering are similar.*

1. Disconnect battery negative (-) cable.
2. Remove key switch nut (A).
3. Remove key switch panel (B).
4. Disconnect wiring lead (C).
5. Disconnect wiring connector (D) and replace key switch.
6. Connect wiring connector (D) and wire lead (C).
7. Install key switch panel.
8. Install nut.
9. Connect battery negative (-) cable.

A—Nut
B—Key Switch Panel
C—010 Black Wire Lead
D—Wiring Connector

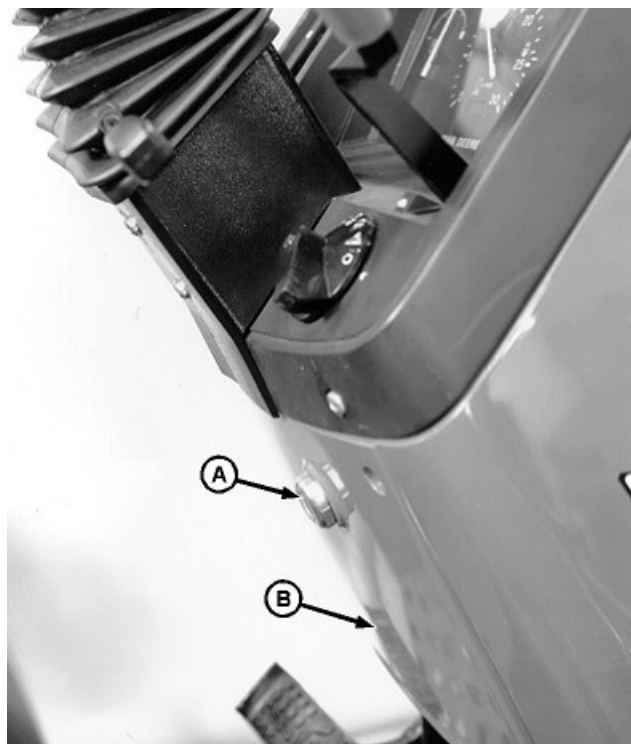

AG.OUO1085,77 -19-08AUG00-1/1