


[2] CONSTRUCTION AND FUNCTION OF COMPONENTS

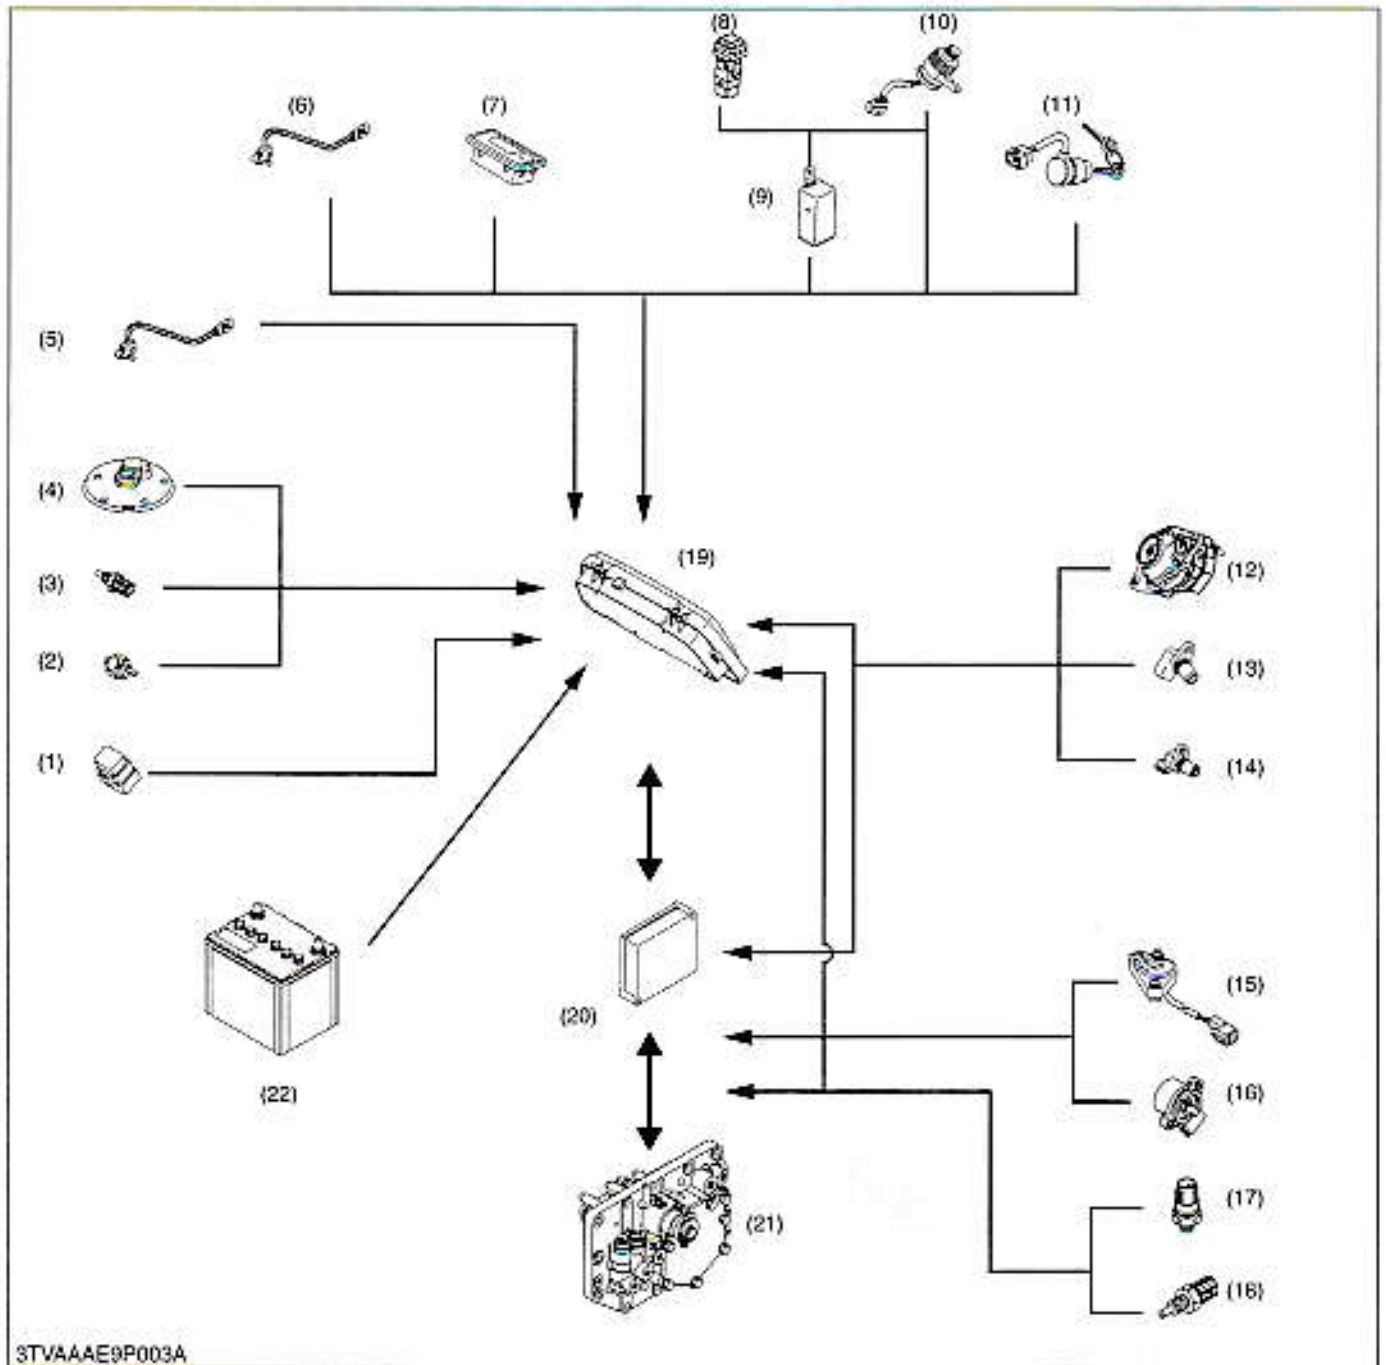

3TVAAAE9P003A

- | | | | |
|---|-------------------------------|---|---|
| (1) Glow Relay | (8) Hazard Switch | (14) Traveling Speed Sensor | (20) Electric Control Unit (ECU) |
| (2) Engine Oil Pressure Switch | (9) Flasher Unit | (15) Shuttle Switch | (21) GST Valve (Solenoid Valve and Proportional Reducing Valve) |
| (3) Coolant Temperature Sensor | (10) Combination Switch | (16) GST Lever Sensor | (22) Battery |
| (4) Fuel Sensor | (11) Main Switch | (17) Oil Pressure Switch | |
| (5) PTO Switch | (12) Alternator | (18) Oil Temperature Sensor | |
| (6) Parking Brake Switch | (13) Engine Tachometer Sensor | (19) Electronic Instrument Panel (IntelliPanel) | |
| (7) Display Mode Switch and Travel Speed Switch | | | |