

<b>Engine Does Not Stop When Main Switch is Turned OFF</b>	Fuse blown (15 A)	Replace	G-31
	Wiring harness disconnected or improperly connected (between main switch <b>AC</b> terminal and engine stop solenoid)	Repair or replace	–
	Engine stop solenoid defective	Replace	6-S14
	Timer relay defective	Replace	6-S14
<b>Engine Does Not Start</b>	Engine stop solenoid defective	Replace	6-S14
	Timer relay defective	Replace	6-S14

W10137180

**OPERATOR PRESENCE CONTROL (OPC)**

Symptom	Probable Cause	Solution	Reference Page
<b>Engine Does Not Stop</b>	Solenoid fuse blown (15A)	Replace	G-31
	Timer relay defective	Replace	6-S14
	Engine stop solenoid defective	Replace	6-S14
	PTO shift lever switch defective	Adjust or replace	6-S12
	Independent PTO lever switch defective	Adjust or replace	6-S12
	HST pedal switch defective	Adjust or replace	6-S12
	Wiring harness disconnected or improperly connected (between timer relay and engine stop solenoid, between timer relay and battery positive terminal)	Repair or replace	–