

■ Rear Wheels

Rear tread can be adjusted in 6 steps depending on the model. (Shown below are the tread variation with the standard tires.)

To change the rear tread:

- (1) Jack up the rear tires.
- (2) Follow the illustrations below to get the desired tread width.



CAUTION

To avoid personal injury:

- When working on slopes or when working with trailer, set the wheel tread as wide as practical for the job for maximum stability.

IMPORTANT:

- Always attach tires as shown in the drawings below.
 - If not attached as illustrated, transmission parts may be damaged.
- Do not use tires larger than specified.

[L2250]

9.5-24 Farm		13.6-16 Truf
1015mm (40.0in.)	1135mm (44.7in.)	1145mm (45.1in.)
	F-3913	F-3914

[L2550 · L2850 · L3250]

Models						
L2550 11.2-24 Farm		1030 mm (40.6 in.)	1125 mm (44.3 in.)	1220 mm (48.0 in.)	1305 mm (51.4 in.)	1400 mm (55.1 in.)
L2850 12.4-24 Farm	1050 mm (41.3 in.)	1150 mm (45.3 in.)	1240 mm (48.8 in.)	1335 mm (52.6 in.)	1420 mm (55.9 in.)	1515 mm (59.6 in.)
L3250 13.6-26 Farm		1155 mm (45.5 in.)	1225 mm (48.2 in.)	1325 mm (52.2 in.)	1350 mm (53.1 in.)	1450 mm (57.1 in.)

Models		
L2550 13.6-16 Turf		1145 mm (45.1 in.)
L2850 · L3250 355/80-D20 Turf	1120 mm (44.1 in.)	1265 mm (49.8 in.)