


[4] ENGINE STOP SOLENOID

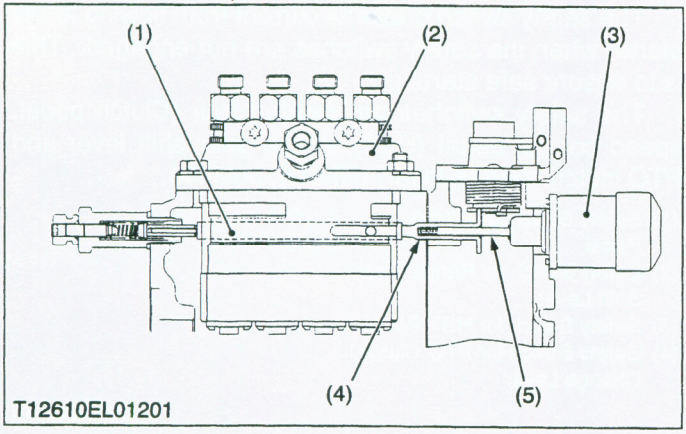

Flowing of the battery current into the fuel cut off solenoid, the plunger (5) move to right side so that the movement of control rack (1) becomes free. When the battery current stops, the plunger (5) is returned to the original position by the spring to keep the control rack (1) in **"No fuel injection"** position.

- (1) Control Rack
- (2) Injection Pump
- (3) Engine Stop Solenoid
- (4) Guide
- (5) Plunger

W1013496

T12610EL01201