

MF 1040 STANDARD TRANSMISSION
Part 5—Section B

Operation Number	Table of Contents	Page Number
	GENERAL	
5B-61-65	TRANSMISSION Removal and Installation	65
5B-62-65	SHIFT COVER Disassembly and Reassembly	65
5B-63-67	FRONT COVER Removal and Installation	67
5B-64-68	COUNTERSHAFT Disassembly and Reassembly	68
5B-65-69	MAIN SHAFT Disassembly and Reassembly	69
5B-66-69	REVERSE IDLER SHAFT Disassembly and Reassembly	69
5B-67-70	RANGE SHIFT CONTROL Removal and Installation	70
5B-68-71	OUTPUT SHAFT Disassembly and Reassembly	71
5B-69-72	TRANSMISSION REBUILD Disassembly and Reassembly	72
	TROUBLE-SHOOTING	73
	SPECIFICATIONS	74