

MAINTENANCE

PERIODIC MAINTENANCE SCHEDULES

Daily or Every 10 Hours

Component	Procedure
Engine Crankcase	Check oil level and inspect for external leakage.
Radiator and Hydrostatic Oil Cooler (As Applicable)	Check coolant level in radiator. Ensure radiator is not plugged with debris.
Transmission, Differential and Hydraulic System	Check oil level. Replenish as required.
Power Steering Reservoir (As Applicable)	Check oil level at operating temperature of 50°-140°F (10°-60°C).
Fan Belt	Check belt adjustment and tighten as required.
Fuel Filter	Ensure adequate fuel supply. Check fuel sediment bowl for water or sediment and clean as required.
Air Cleaner	Remove air cleaner cap and baffle plate and remove dirt accumulation. Visually examine outer paper air cleaner element.
Battery	Clean off top of battery as required. Ensure battery connections are clean and tight.
Clutch and Brakes	Check pedals for smooth operation. Ensure clutch pedal has free play and that brakes are adjusted evenly.
Visual Inspection	Check operation of lights. Ensure wheel and chassis bolts are tight.