

---

**MAINTENANCE**


---

**Every 100 Hours**

Component	Procedure
Engine Crankcase	Drain and install new engine oil in crankcase. See NOTE under "Every 20 Hours" for initial engine oil and filter change.
Engine Oil Filter	Replace filter with every engine oil change. See NOTE under "Every 20 Hours" for initial filter change.
Front Wheels	Check toe-in of front wheels and adjust as required. Examine all steering rods and bushings for excessive wear.

**Every 200 Hours**

Component	Procedure
Transmission, Differential and Hydraulic System	Drain and replace lubricant. Replace hydraulic oil filters. See NOTE under "Every 50 Hours" for initial oil change.
Front Differential and Wheel Reduction Units (4-WD Only)	Drain and replace oil in front differential and each wheel reduction unit. See NOTE under "Every 50 Hours" for initial oil change.
Front Wheel Bearings (2-WD Only)	Check front wheel hubs for looseness and tighten front wheel bearings as required.
Injection Pump (MF 1040 Only)	Drain and refill injection pump with clean lubricating oil.
Power Steering Reservoir (As Applicable)	Drain and replace oil.
Fuel Filter (MF 1010/1020/1030/1035)	Replace filter element and clean sediment bowl.

**Every 400 Hours**

Component	Procedure
Fuel Filter (MF 1040/1045)	Replace filter element and clean sediment bowl.
Front Wheel Bearings (2-WD Only)	Repack with new grease.
Injection Pump (MF 1010/1020/1030/1035)	Drain and refill injection pump with clean lubricating oil.