

## MF 1040 STANDARD TRANSMISSION

## Key

- |                            |                         |
|----------------------------|-------------------------|
| 1. Snap Ring               | 46. 24T and 51T Gear    |
| 2. Thrust Washer           | 47. Needle Bearing      |
| 3. Bearing                 | 48. Needle Bearing      |
| 4. 3rd — 4th Gear          | 49. Inner Ring          |
| 5. Reverse Gear            | 50. Thrust Washer       |
| 6. 2nd Gear                | 51. Bearing             |
| 7. Snap Ring               | 52. Bearing Cover       |
| 8. Thrust Washer           | 53. Screw               |
| 9. Inner Ring              | 54. Needle Bearing      |
| 10. Needle Bearing         | 55. Key                 |
| 11. 1st Gear               | 56. Output Shaft        |
| 12. Thrust Washer          | 57. O-Ring              |
| 13. Inner Ring             | 58. Reverse Idler Shaft |
| 14. 26T Gear               | 59. Roll Pin            |
| 15. Snap Ring              | 60. Spacer              |
| 16. Countershaft           | 61. Thrust Washer       |
| 17. Bearing                | 62. Needle Bearing      |
| 18. Thrust Washer          | 63. Reverse Idler Gear  |
| 19. Snap Ring              | 64. Roll Pin            |
| 20. Snap Ring              | 65. Spacer              |
| 21. Thrust Washer          | 66. Snap Ring           |
| 22. Bearing                | 67. Thrust Washer       |
| 23. Snap Ring              | 68. Bearing             |
| 24. Thrust Washer          | 69. Thrust Washer       |
| 25. 25T and 34T Gear       | 70. 23T and 48T Gear    |
| 26. Bearing                | 71. Needle Bearing      |
| 27. Collar                 | 72. Collar              |
| 28. Bearing                | 73. Needle Bearing      |
| 29. Thrust Washer          | 74. Inner Ring          |
| 30. Screw                  | 75. Sleever             |
| 31. Nut                    | 76. PTO Hub             |
| 32. Lock Washer            | 77. 1st PTO Gear        |
| 33. Front Cover            | 78. Needle Bearing      |
| 34. Snap Ring              | 79. Inner Ring          |
| 35. Thrust Washer          | 80. Collar              |
| 36. Bearing                | 81. Bearing             |
| 37. Main Shaft             | 82. PTO Shaft           |
| 38. Snap Ring              | 83. Needle Bearing      |
| 39. Washer                 | 84. Collar              |
| 40. Bearing                | 85. 17T and 33T Gear    |
| 41. Washer                 | 86. Needle Bearing      |
| 42. 22T Gear               | 87. Collar              |
| 43. Needle Bearing         | 88. Thrust Washer       |
| 44. 40T Gear               | 89. Bearing             |
| 45. HI and LO Range Collar | 90. Inner Ring          |