

EXTENDED STORAGE OF TRACTOR

Component	Procedure
Implements and Additional Weights	Remove prior to tractor storage.
Fuel Tank	Fill fuel tank to prevent condensation. Shut off fuel valve.
Radiator	Check for adequate anti-freeze protection. Increase protection or drain radiator and cylinder block.
Battery	Remove battery and store in cool dry place. Recharge battery monthly.
Tires	When possible, block up tractor to remove weight from tires.
Grease Fittings	Lubricate all grease fittings and lubricate moving parts and sliding surfaces (PTO shaft, etc.).
Clutch	Depress clutch pedal and lock in disengaged position to prevent clutch disc seizure during long storage.
Tractor	Touch up scratches in paint and store tractor indoors preferably. If tractor is stored outside, cover open end of exhaust pipe and cover entire tractor.