

(2) Mid hanger bracket

(3) 6-plain washer, spring washer and nut


IMPORTANT:

- Tightening torque

	N·m	kgf·m	ft·lbs
Nut	69	7.0	51

NOTE:

- The mid hanger brackets are not required on the tractor with a front loader.
2. Install the rear hanger bracket from left side of the tractor stay holes.

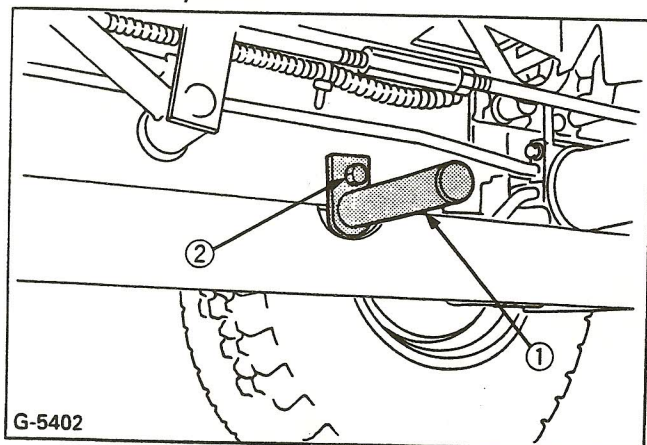

(1) Rear hanger bracket


(2) 1-M8x25

SETTING UP THE LINKS

1. Install the lift arms to the rear hanger bracket with link stoppers and cotter pins.
2. Install the lift arms, lift links and connecting rods with clevis pins, plain washers and cotter pins as illustrated below.

NOTE:

- Completely bend the cotter pin (5) to prevent contact with link stopper as shown below.
- When assembling the connecting rod, insert the clevis pin from the outside as shown, and be sure to properly bend the cotter pin.

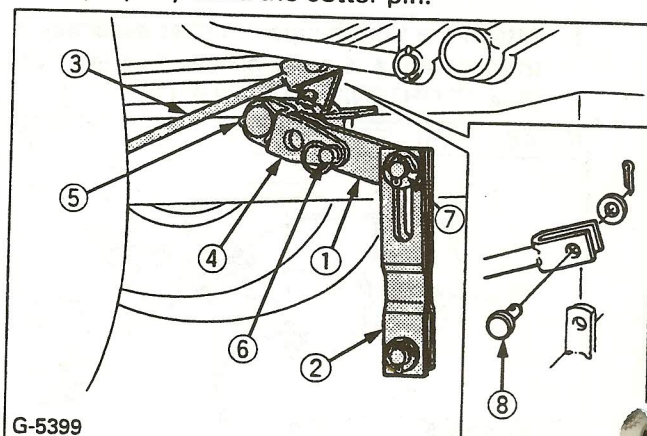

(1) Lift arms

(2) Lift link

(3) Connecting rod


(4) Link stopper

(5) Cotter pin (ø5.6x44)


(6) Clevis pin (ø8x25)

(7) Clevis pin (ø12.7x38)

(8) Clevis pin (ø12.7x32)

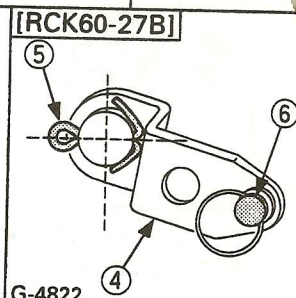

G-4822

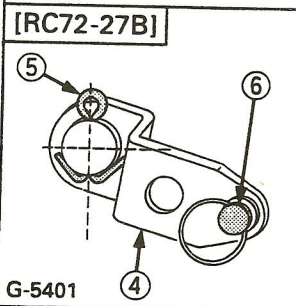

G-5401