

**Power Trac
PT-180**

Towing Instructions

The variable volume pump mounted to the bell-housing end of the engine is also the pump used to tow the machine. Open tow valve two turns.

Note: Tow machine slowly, also note these ports can be used to check high pressure.

