


# DISMOUNTING AND MOUNTING

## [1] DISMOUNTING THE BACKHOE FROM TRACTOR

### WARNING

- When starting the engine, always sit in the proper operator's seat of the tractor.
- Keep hands, feet and body from between the tractor and the backhoe and under the backhoe.
- When getting off the tractor, make sure that range gear shift lever and PTO lever is in neutral, then apply the parking brake.
- When leaving the operator's seat, fully lower the boom.

12010S00150

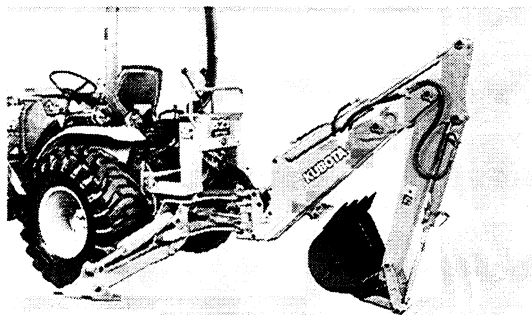

12010P01040


### Preparation

1. Fully close the dipperstick, curl the bucket and lower the boom until the back of bucket contacts the ground.

### ■ IMPORTANT

- For removing the backhoe, locate the tractor / loader / backhoe on a flat and hard surface, preferably concrete. If the ground surface is soft, place a board on the ground for the bucket and stabilizers.


12010S00160

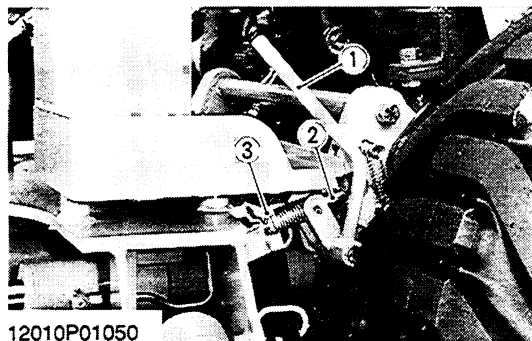

12010P01050

### Mount Lever

1. Raise the rear wheels by operating the boom to lowering direction.
2. Remove the snap pins (3) and release the set pins (2) with the mount levers (1).
3. Set the snap pins (3) to the release position.
4. Keep the stabilizer pads at about 15 inches height and operate the boom slowly in the up position to disengage the mount holder (5) from the tractor mount pins (4).
5. Raise the backhoe by operating the stabilizers to lowering direction until the mount bars (7) hit to the main frame guide (6) on the support hooks (8).
6. Move the tractor forward from the backhoe about 8 inches.

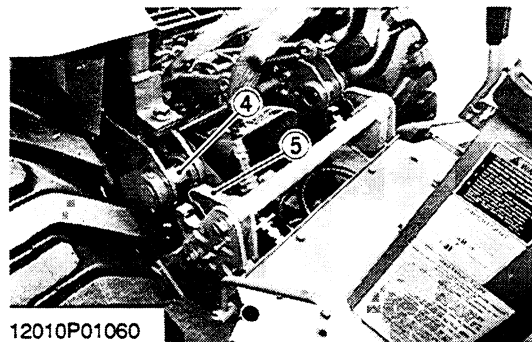


12010P01060

### ■ IMPORTANT


- Be careful not to damage or break the hoses when moving the tractor.
7. Lower the backhoe onto the ground by operating the stabilizers, and shut off the engine.
  8. Lower the main frame onto the ground to keep stable by operating the boom lever.

- |                 |                      |
|-----------------|----------------------|
| (1) Mount Lever | (5) Mount Holder     |
| (2) Set Pin     | (6) Main Frame Guide |
| (3) Snap Pin    | (7) Mount Bar        |
| (4) Mount Pin   | (8) Support Hook     |

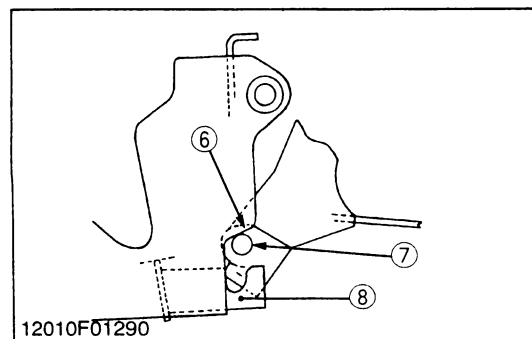

12010F01290


12010S00170

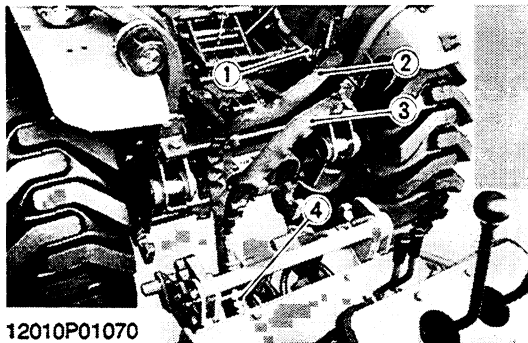


**Hydraulic Hose**

1. Disconnect the hydraulic hoses (2), (3).
2. Connect the tractor's outlet hose (3) to the return pipe (1).
3. Connect the backhoe's outlet hose (2) to the inlet hose (4).

- |                           |                           |
|---------------------------|---------------------------|
| (1) Return Pipe (Tractor) | (3) Outlet Hose (Tractor) |
| (2) Outlet Hose           | (4) Inlet Hose            |

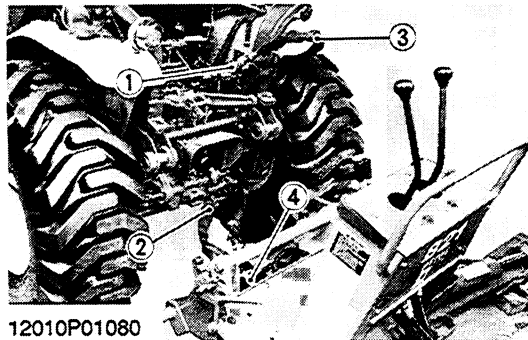

12010S00180

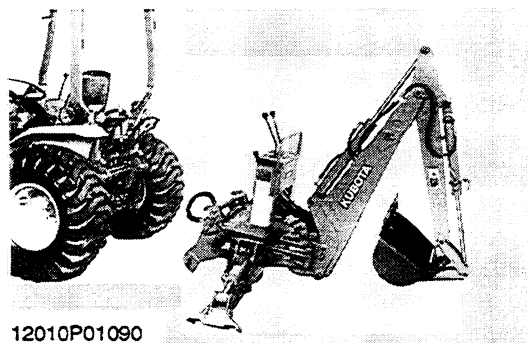

**Separation**

1. Slowly move the tractor forward and make sure of the removal of the backhoe.

12010S00190