

# SECTION 1. TRACTOR TYPES AND PUNCHED IDENTIFICATION MARKS

The tractor serial number is shown on the left hand side of the tractor as shown in the picture. The engine number is stamped on the top of the engine block.

Engine type and number on the top of Engine body



Manufacturer's tractor Sr. No.

punched on plate on the L.H.S of Axle bracket

## 1.MODEL NAME PLATE

The plate indicates the model and type of the tractor.

- ① Model name
- ② Production I.D No.

The production I.D reference number is as shown below

**T273** H Y 10 0001

