

[6] SEPARATING CLUTCH HOUSING AND MID CASE


[6]-1 DRAINING TRANSMISSION FLUID

- Drain transmission fluid. (See page S.S-3)

[6]-2 REMOVING PROPELLER SHAFT [4WD TYPE]

- Refer to [3] -2. (See page S.S-7)

[6]-3 REMOVING BRAKE PEDALS AND CLUTCH PEDAL

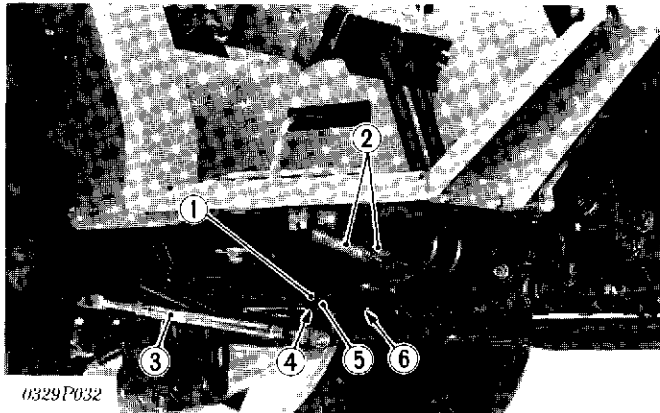

- | | |
|-----------------------|------------------------|
| (1) Brake Pedal Shaft | (4) External Snap Ring |
| (2) Return Spring | (5) Collar |
| (3) Brake Rod | (6) Spring Pin |

Brake Pedals and Clutch Pedal

1. Remove the clevis pin at the end of brake rod (3) and the clevis pin at the end of clutch rod.
2. Remove the brake pedal return springs (2) and clutch pedal return spring.
3. Tap out the spring pin (6) in the brake pedal LH.
4. Remove the external snap ring (4) and collar (5).
5. Draw out the brake pedal shaft (1) to the left side of tractor to remove the brake pedals and clutch pedal.


(When reassembling)

- After reassembling the pedals, inject grease until it comes out.

■ IMPORTANT

- After reassembling the brake pedal, be sure to adjust the brake pedal play and clutch pedal play. (See page S.2-6, 14, S.5-2)

[6]-4 SEPARATING CLUTCH HOUSING AND MID CASE

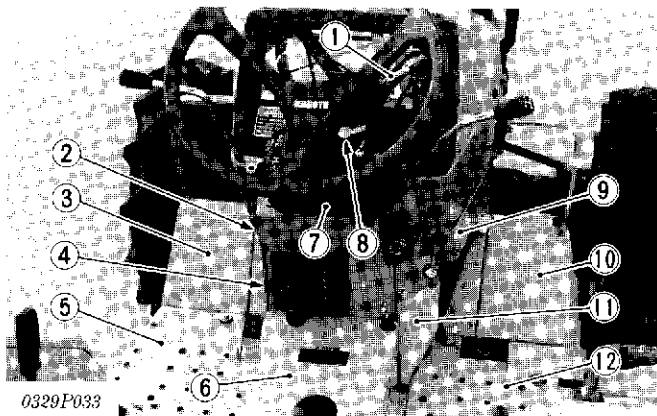

- | | |
|-------------------------|-------------------------|
| (1) Hand Accel Lever | (7) Main Change Cover |
| (2) Rear Lower Cover LH | (8) Spring Pin |
| (3) Foot Cover LH | (9) Rear Lower Cover RH |
| (4) Side Cover LH | (10) Foot Cover RH |
| (5) Step LH | (11) Side Cover RH |
| (6) Floor Cover | (12) Step RH |

Covers and Steps

1. Remove the foot covers (3) (10), side covers (4) (11), rear lower cover (2) (9), floor cover (6), step LH (4) and step RH (12).
2. Tap out the spring pin (8) and remove the hand accel lever (1).
3. Remove the main change cover (7).