CABIN MODEL

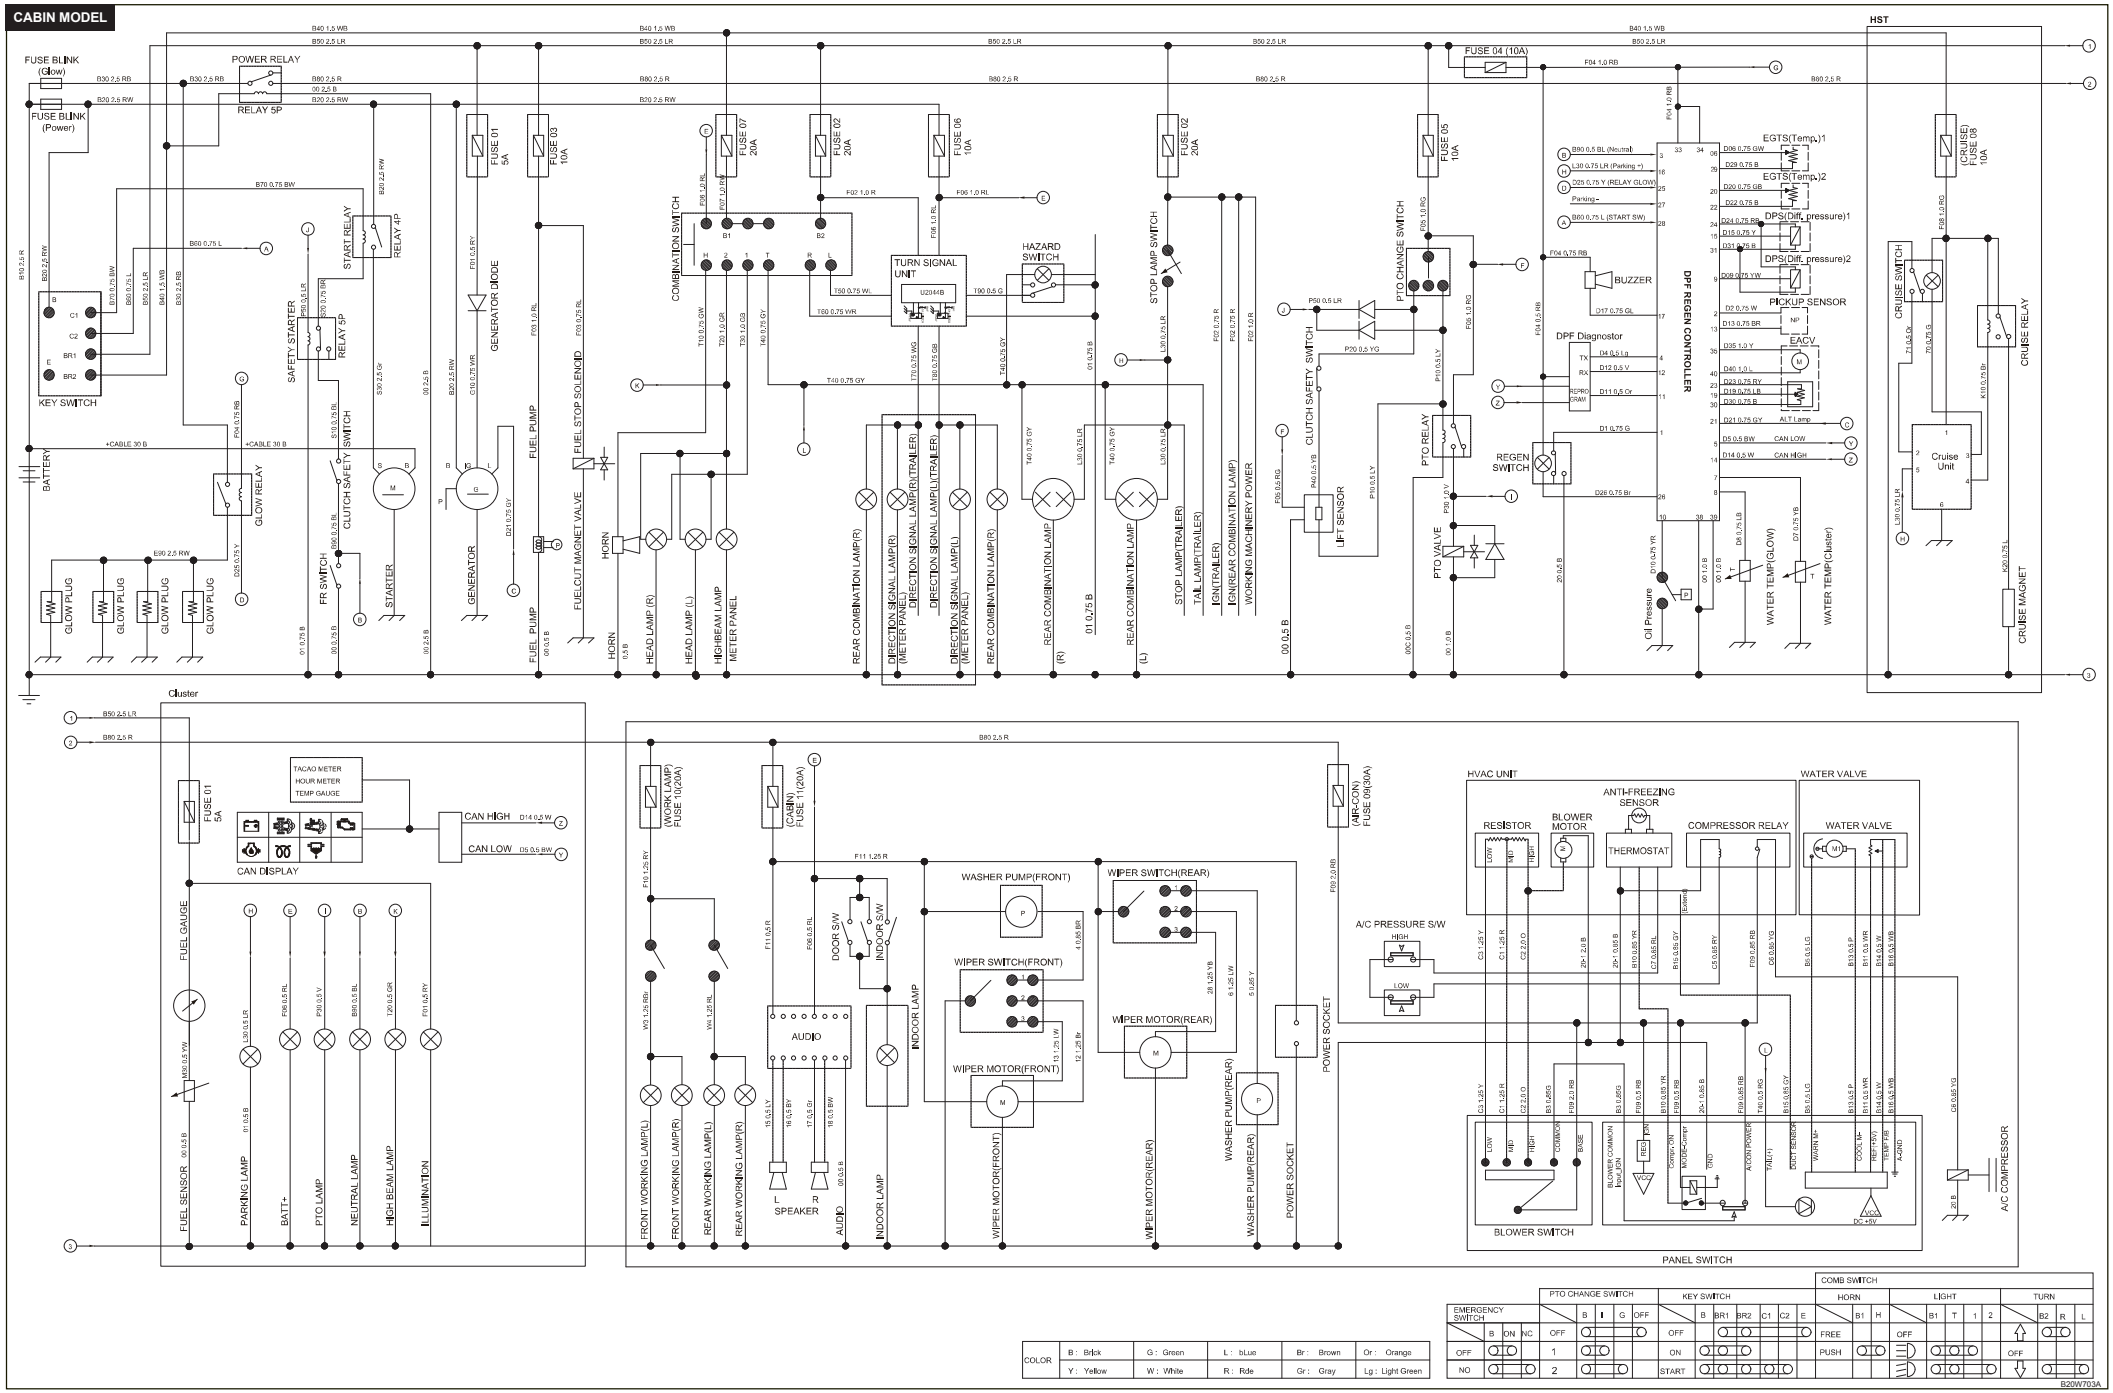
FUSE BLINK (Glow)
FUSE BLINK (Power)
POWER RELAY
RELAY 5P
KEY SWITCH
BATTERY
START RELAY
RELAY 4P
SAFETY STARTER
RELAY 5P
GLOW RELAY
CLUTCH SAFETY SWITCH
FR SWITCH
STARTER
GLOW PLUG
GENERATOR DIODE
GENERATOR
FUEL PUMP
FUEL STOP SOLENOID
FUELCUT MAGNET VALVE
HORN
HEAD LAMP (R)
HEAD LAMP (L)
HIGHBEAM LAMP METER PANEL
COMBINATION SWITCH
TURN SIGNAL UNIT
HAZARD SWITCH
REAR COMBINATION LAMP(R)
DIRECTION SIGNAL LAMP(R)(TRAILER)
DIRECTION SIGNAL LAMP(METER PANEL)
DIRECTION SIGNAL LAMP(L)(TRAILER)
REAR COMBINATION LAMP (R)
REAR COMBINATION LAMP (L)
STOP LAMP(TRAILER)
TAIL LAMP(TRAILER)
IGN(TRAILER)
IGN(REAR COMBINATION LAMP)
WORKING MACHINERY POWER
STOP LAMP SWITCH
CLUTCH SAFETY SWITCH
LIFT SENSOR
PTO CHANGE SWITCH
PTO RELAY
PTO VALVE
FUSE 04 (10A)
BUZZER
DPF Diagnostor
REGEN SWITCH
DPF REGEN CONTROLLER
EGTS(Temp.)1
EGTS(Temp.)2
DPS(Diff. pressure)1
DPS(Diff. pressure)2
PICKUP SENSOR
EACV
ALT Lamp
CAN LOW
CAN HIGH
Oil Pressure
WATER TEMP(GLOW)
WATER TEMP(Cluster)
HST
CRUISE SWITCH
CRUISE RELAY
Cruise Unit
CRUISE MAGNET
Cluster
FUSE 01 5A
TACAO METER
HOUR METER
TEMP GAUGE
CAN DISPLAY
CAN HIGH
CAN LOW
FUEL GAUGE
FUEL SENSOR
PARKING LAMP
BATT+
PTO LAMP
NEUTRAL LAMP
HIGH BEAM LAMP
ILLUMINATION
(WORK LAMP) FUSE 10(20A)
(CABIN) FUSE 11(20A)
(AIR-CON) FUSE 09(30A)
DOOR S/W
INDOOR S/W
AUDIO
SPEAKER
INDOOR LAMP
FRONT WORKING LAMP(L)
FRONT WORKING LAMP(R)
REAR WORKING LAMP(L)
REAR WORKING LAMP(R)
WASHER PUMP(FRONT)
WIPER SWITCH(FRONT)
WIPER MOTOR(FRONT)
WIPER SWITCH(REAR)
WIPER MOTOR(REAR)
WASHER PUMP(REAR)
POWER SOCKET
HVAC UNIT
RESISTOR
BLOWER MOTOR
ANTI-FREEZING SENSOR
THERMOSTAT
COMPRESSOR RELAY
WATER VALVE
A/C PRESSURE S/W
BLOWER SWITCH
PANEL SWITCH
A/C COMPRESSOR
EMERGENCY SWITCH
PTO CHANGE SWITCH
KEY SWITCH
COMB SWITCH
HORN
LIGHT
TURN
COLOR
B : Brick
G : Green
L : bLue
Br : Brown
Or : Orange
Y : Yellow
W : White
R : Rde
Gr : Gray
Lg : Light Green
B20W703A