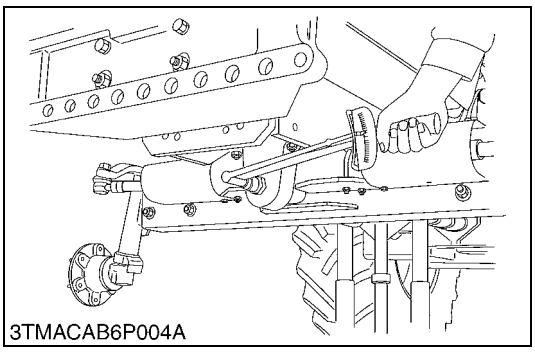
3TMACAB6P004A

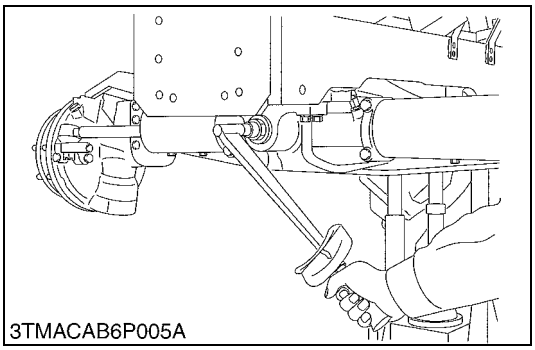
3TMACAB6P005A

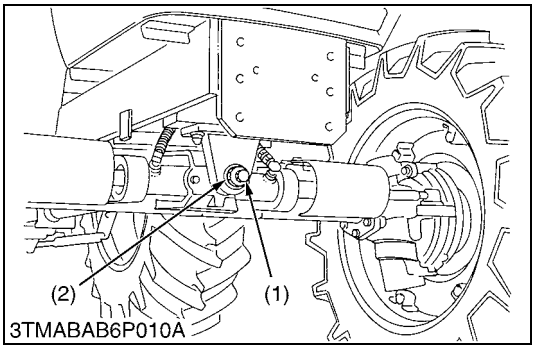

3TMABAB6P010A

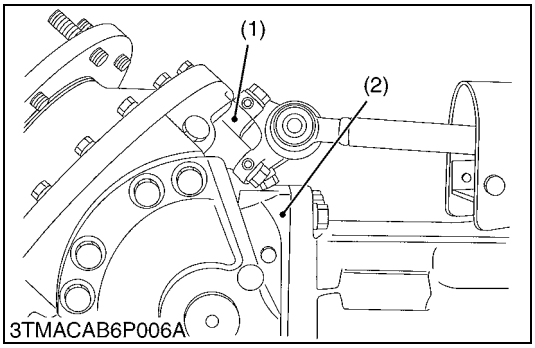

3TMACAB6P006A

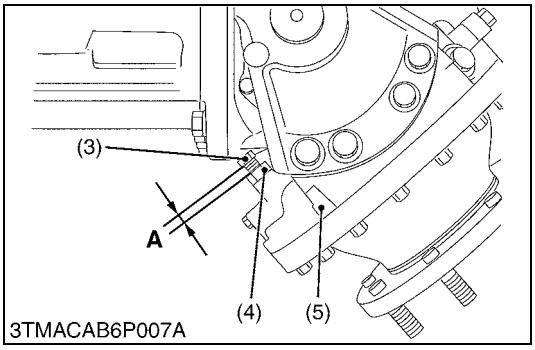

3TMACAB6P007A

Adjusting Front Axle Pivot

1. Jack up the tractor body, then loosen the front axle rocking force adjusting lock nut (2).
2. Measure the adjusting screw tightening torque.
3. If tightening torque is not within the factory specifications, adjust the front axle rocking force adjusting screw (1).
4. After adjustment, tighten the lock nut firmly.

Tightening torque	Front axle rocking force adjusting screw	19.6 to 29.4 N·m 2.0 to 3.0 kgf·m 14.5 to 21.7 ft-lbs
	Front axle rocking force adjusting lock nut	98.1 to 147.1 N·m 10.0 to 15.0 kgf·m 72.3 to 108.5 ft-lbs

(1) Front Axle Rocking Force Adjusting Screw
(2) Front Axle Rocking Force Adjusting Lock Nut

W1012203

Adjusting between Bevel Gear Case and Stopper [4WD Type]

1. Inflate the tires to the specified pressure.
2. Steer the wheels to the extreme right until the knuckle arm (1) contacts with the bevel gear case (2).
3. If the knuckle arm (1) can not be contacted with the bevel gear case (2), shorten the length of stopper (3).
4. Keeping the knuckle arm (1) contact with the bevel gear case (2), make a specified length as shown in the table.
5. After adjustment, secure the stopper with the lock nut (4).
6. For adjusting the left steering angle, perform the same procedure as mentioned in right steering angle.

Clearance between bevel gear case and stopper	Factory spec.	Below 0.5 mm 0.02 in.

Length (**A**)	Reference	9.0 mm 0.35 in.

(1) Knuckle Arm
(2) Bevel Gear Case
(3) Stopper
(4) Lock Nut
(5) Front Gear Case

A : Length

W1012461