

MOUNTING TO THE TRACTOR




CAUTION

To avoid personal injury:

- Park the tractor on a firm, flat and level surface, set the parking brake, stop the engine and remove the key.

MOUNTING THE FRONT HANGER BRACKETS TO THE TRACTOR


1. Attach the front hanger bracket assembly to the tractor with M14 bolts, nuts and spring washers. (See "TIGHTENING TORQUE CHART.")

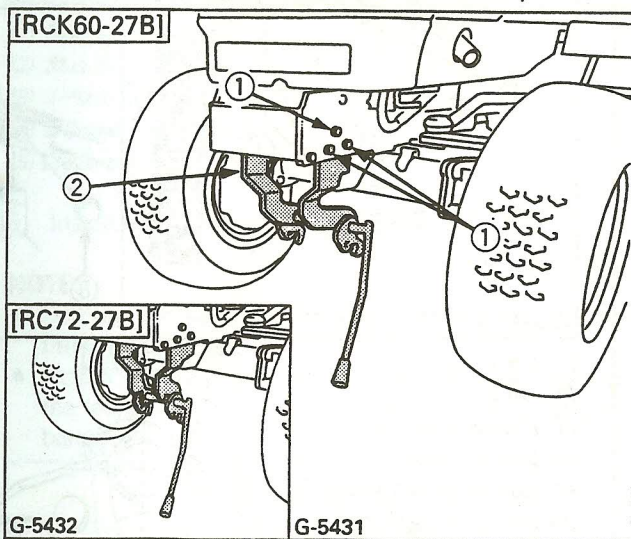

- (1) 6-M14×35 Bolt, spring washer, nut
(2) Front hanger bracket assembly

MOUNTING THE MID AND REAR HANGER BRACKETS TO THE TRACTOR

1. Attach the mid hanger brackets to the tractor with M12 stud bolts, plain washers, spring washers and nuts.

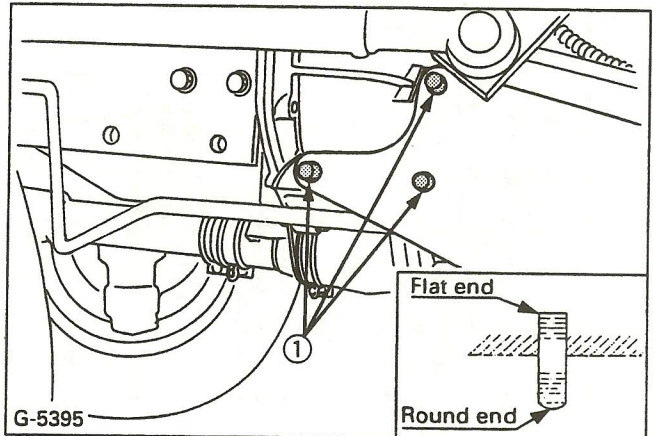

- (1) 6-M12×40 stud bolt (round end outside)

IMPORTANT:

- Tightening torque

	N·m	kgf·m	ft·lbs
Stud bolt	31	3.2	23