

## LUBRICATION AND MAINTENANCE

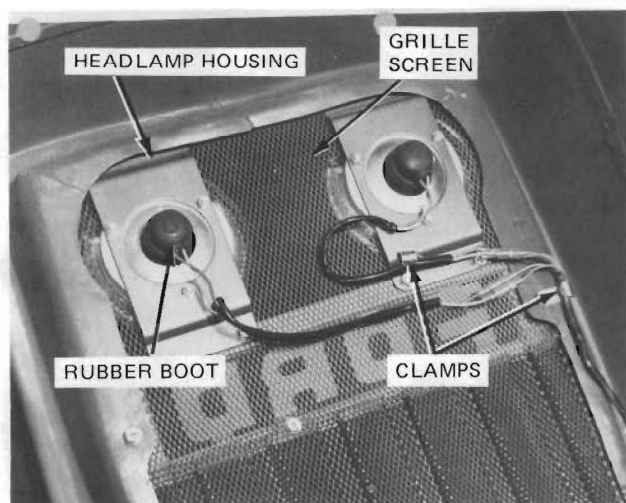


Figure 49 — Headlamp Assembly

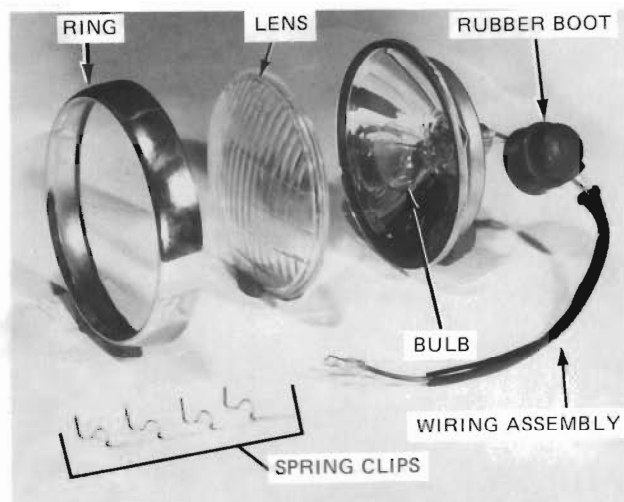


Figure 51 — Headlamp Assembly — Disassembled

3. Remove the headlamp wiring assemblies from clamps, if necessary.
4. Disconnect wiring assembly and pull headlamp assembly from front of grille.
5. Slide rubber boot back off the lamp socket, Figure 50.
6. Remove four spring clips holding the reflector in the ring, Figure 50.
7. Remove ring from assembly taking care not to drop the glass lens, Figure 51.
8. Remove lens and seal from front of reflector.



**CAUTION:** Do not touch front of reflector with fingers. Damage to reflective surface may be caused by touching with the fingers.

9. Push in on spring retainer with one hand while twisting bulb with other hand to release bulb from retainer tabs, Figure 52.
10. Position new bulb to socket, making sure that contacts will properly mate. The retaining tabs will only line up one way. Rotate bulb until tabs are properly aligned. Twist bulb into place while compressing spring retainer.
11. Reassemble headlamp assembly.

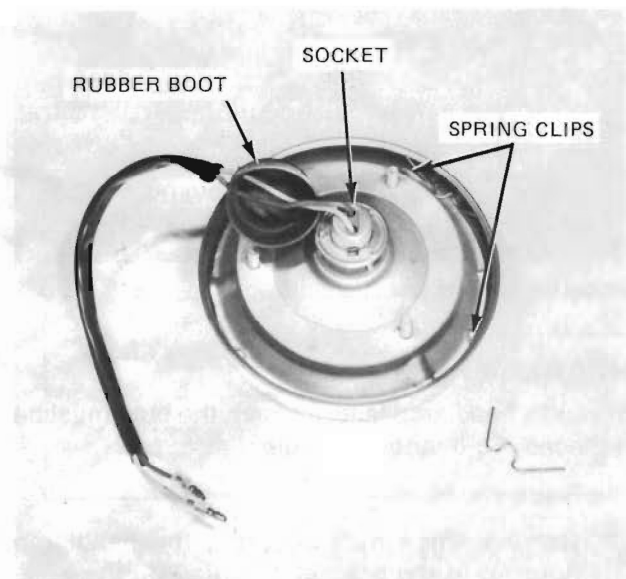


Figure 50 — Headlamp Socket Rubber Boot



Figure 52 — Bulb Removal