


Instrument Panel Master Plug Identification - As viewed from rear of instrument panel

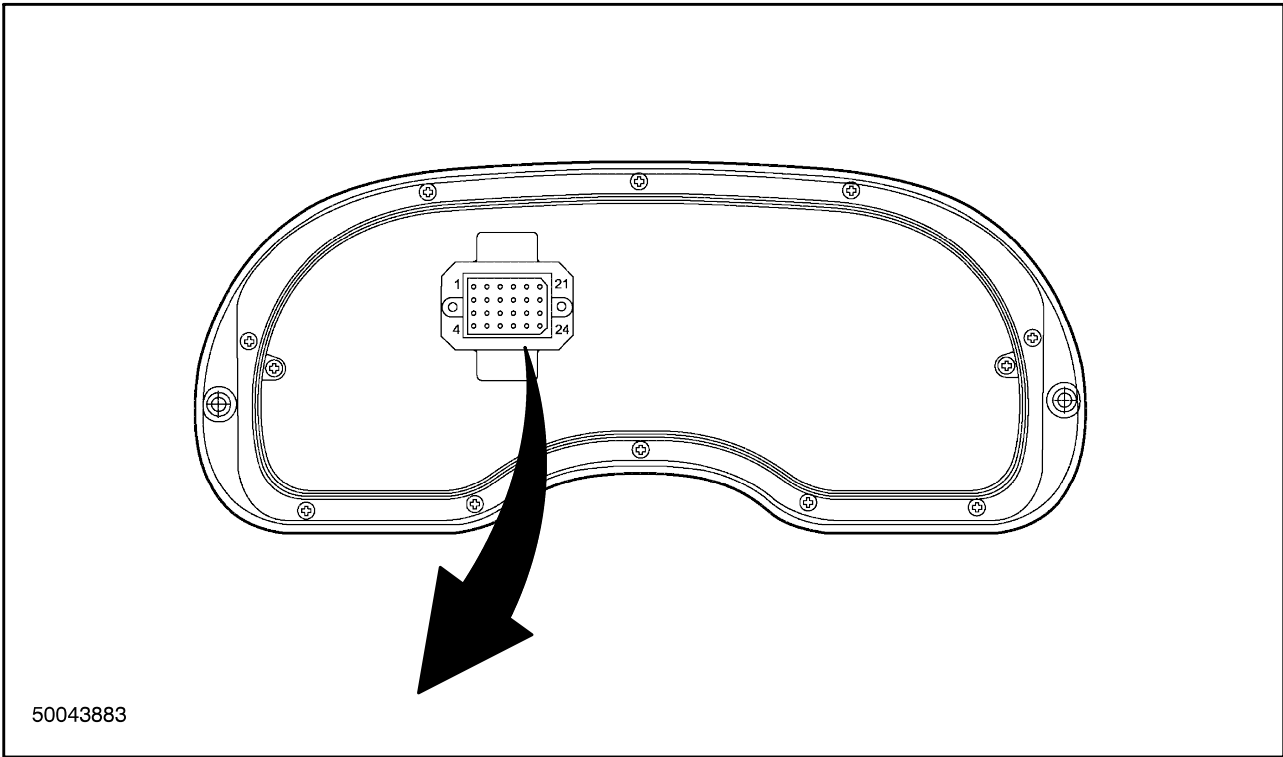

18

1	5	9	13	17	21
2	6	10	14	18	22
3	7	11	15	19	23
4	8	12	16	20	24

Pin #	Function	Pin #	Function
1.	Engine Oil Pressure Indicator Light	13.	Open
2.	Switched Power (+)	14.	Fuel Level Gauge
3.	Open	15.	Engine Temperature Gauge
4.	Open	16.	Open
5.	Open	17.	Trailer
6.	Alternator Charging (-)	18.	(High Beam)
7.	Glow Plug Indicator Light	19.	Right Turn Signal Indicator Light
8.	Open	20.	Engine RPM
9.	Left Turn Signal Indicator Light	21.	Open
10.	Open	22.	Open
11.	Parking Brake Indicator Light	23.	Panel Illumination
12.	PTO Indicator Light	24.	Constant Ground (-)