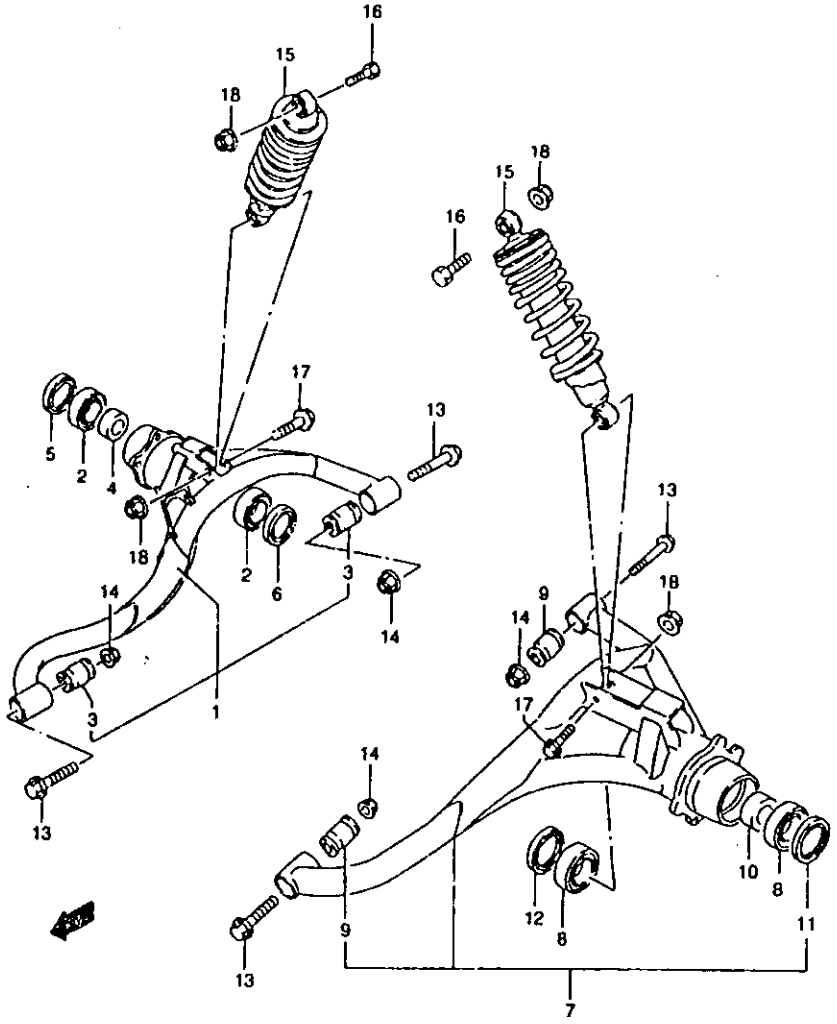

Fig.55 (I-8) SUSPENSION ARM

Ref #	Part Number	Description	Qty	Remarks
1	61100-39880-019	ARM SET, SUSPENSION RH (BLACK	1	
2	09262-32008	.BEARING (32X58X13)	2	
3	09319-10030	.BUSHING (10.2X25.5X52.2)	2	
4	09180-32007	.SPACER (32.4X38X17)	1	
5-1	09283-40018	.SEAL, DUST OUTER (40X58X6)	1	MODEL X/Y/K1
5-2	09283-40032	.SEAL, DUST OUTER (40X58X6)	1	MODEL K2
6	09283-40019	.SEAL, DUST INNER (40X58X8)	1	
7	61100-39890-019	ARM SET, SUSPENSION LH	1	BLACK
8	09262-32008	.BEARING (32X58X13)	2	
9	09319-10030	.BUSHING (10.2X25.5X52.2)	2	
10	09180-32007	.SPACER (32.4X38X17)	1	
11-1	09283-40018	.SEAL, DUST OUTER (40X58X6)	1	MODEL X/Y/K1
11-2	09283-40032	.SEAL, DUST OUTER (40X58X6)	1	MODEL K2
12	09283-40019	.SEAL, DUST INNER (40X58X8)	1	
13	09103-10247	BOLT (10X77)	4	
14	08319-31107	NUT	4	
15-1	62100-19B81-019	ABSORBER ASSY, REAR SHOCK	2	MODEL X/Y BLACK
15-2	62100-19B90-019	ABSORBER ASSY, REAR SHOCK	2	MODEL K1/K2 BLACK
16	09100-10227	BOLT, UPPER (10X38)	2	
17	09103-10126	BOLT, LOWER (10X48)	2	
18	08319-31107	NUT	4	

2001 American Suzuki Motor Corporation

AIR CLEANER	C-06	CRANKCASE COVER	B-06	FRAME	F-02	GASKET SET	B-02	LEFT REAR WHEEL	I-11	RECOIL STARTER	C-08	SUSPENSION ARM	I-08
BACKUP LAMP	E-14	CRANKCASE	B-05	FRONT BRAKE HOSE	I-05	GEAR SHIFTING	D-09	MAGNETO	E-04	RIGHT REAR WHEEL	I-09	TAIL LAMP	E-19
BATTERY	E-06	CRANKSHAFT	B-07	FRONT CALIPER	I-04	HANDLE LEVER	G-03	MUFFLER	C-09	SEAT	G-10	TRANSMISSION LEVER	G-05
CAM CHAIN	B-10	CYLINDER HEAD	B-03	FRONT DRIVE SHAFT	H-09	HANDLEBAR - CABLE	G-02	OIL COOLER	C-10	SECONDARY GEAR - PR	D-07	TRANSMISSION	D-03
CAM SHAFT - VALVE	B-09	CYLINDER	B-04	FRONT FENDER	F-08	HEADLAMP COVER	F-07	OIL PUMP - FUEL PUM	C-11	SPEEDOMETER	E-07	WIRING HARNESS	E-12
CARBURETOR	C-02	DIFFERENTIAL GEAR	D-12	FRONT MASTER CYLIND	I-07	HEADLAMP	E-09	OPTIONAL	I-12	STARTER CLUTCH	B-08		
CARRIER	F-05	DIFFERENTIAL LOCK	D-14	FRONT WHEEL BRAKE	I-02	KNUCKLE ARM	H-05	REAR BOX	G-07	STARTING MOTOR	C-07		
CLUTCH	D-02	ELECTRICAL	C-05	FRONT WHEEL	I-01	LEFT CRANKCASE COVE	B-11	REAR BRAKE HOSE	I-06	STEERING SHAFT	G-04		

FIG.56

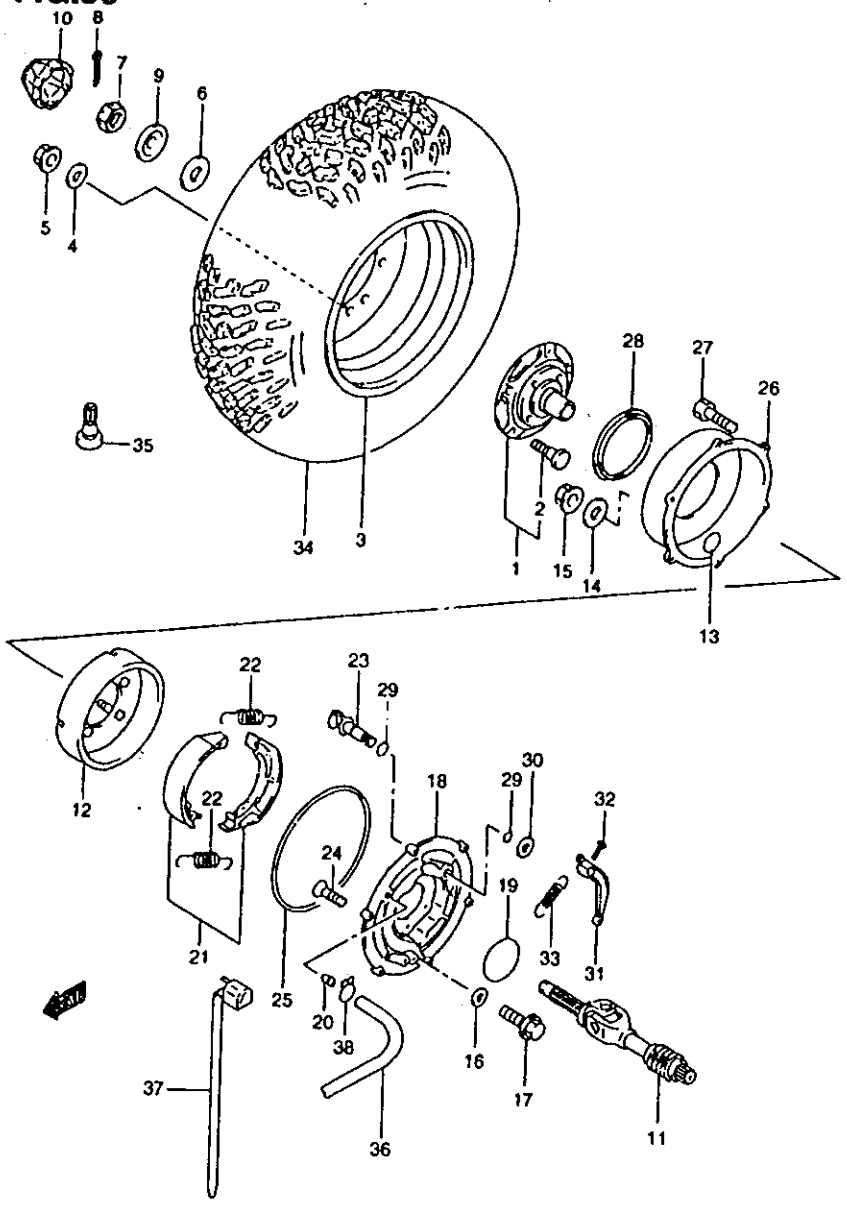

Fig.56 (I-9) RIGHT REAR WHEEL

Ref #	Part Number	Description	Qty	Remarks
1-1	64110-39D20	HUB, REAR RH	1	MODEL X/Y
1-2	64110-39D40	HUB, REAR RH	1	MODEL K1/K2
2	09119-10062	.BOLT (10X24.5)	5	
3	65310-19B81-12R	RIM, REAR WHEEL (12X8.0AT)	1	SILVER
4	09160-10126	WASHER, WHEEL	5	
5	08316-10103	NUT	5	
6	09164-18004	WASHER	1	
7	09141-18008	NUT, HUB	1	
8	04111-40408	COTTER PIN	1	
9	64726-19B00	HOLDER, CAP	1	
10	54725-39D00	CAP, WHEEL CENTER	1	
11	64710-39D00	AXLE, REAR	1	
12	64120-39D00	DRUM, BRAKE	1	
13	09280-10016	O RING (ID:9.8,D:1.90)	4	
14	08322-01103	WASHER	4	
15	08319-31103	NUT	4	
16	09161-10007	WASHER, DRAIN PLUG	1	
17	09247-10008	PLUG, DRAIN	1	
18	64210-39D00	PANEL, BRAKE ANCHOR	1	
19	09280-70010	O RING, PANEL (ID:69.5,D:2.00	1	
20	09364-12002	UNION	1	
21	64400-41810	SHOE SET, BRAKE	1	
22	55420-30000	SPRING, SHOE	2	
23	64440-39D01	CAM, REAR BRAKE	1	
24	09120-08015	BOLT, PANEL (8X18)	4	
25	64124-39D10	O RING, PANEL (ID:210,D:4.0)	1	

LT-F300FY E03 E28_056
RIGHT REAR WHEEL

2001 American Suzuki Motor Corporation

AIR CLEANER	C-06	CRANKCASE COVER	B-06	FRAME	F-02	GASKET SET	B-02	LEFT REAR WHEEL	I-11	RECOIL STARTER	C-08	SUSPENSION ARM	I-08
BACKUP LAMP	E-14	CRANKCASE	B-05	FRONT BRAKE HOSE	I-05	GEAR SHIFTING	D-09	MAGNETO	E-04	RIGHT REAR WHEEL	I-09	TAIL LAMP	E-10
BATTERY	E-06	CRANKSHAFT	B-07	FRONT CALIPER	I-04	HANDLE LEVER	G-03	MUFFLER	C-09	SEAT	G-10	TRANSMISSION LEVER	G-05
CAM CHAIN	B-10	CYLINDER HEAD	B-03	FRONT DRIVE SHAFT	H-09	HANDLEBAR - CABLE	G-02	OIL COOLER	C-10	SECONDARY GEAR - PR	D-07	TRANSMISSION	D-03
CAM SHAFT - VALVE	B-09	CYLINDER	B-04	FRONT FENDER	F-08	HEADLAMP COVER	F-07	OIL PUMP - FUEL PUM	C-11	SPEEDOMETER	E-07	WIRING HARNESS	E-12
CARBURETOR	C-02	DIFFERENTIAL GEAR	D-12	FRONT MASTER CYLIND	I-07	HEADLAMP	E-09	OPTIONAL	I-12	STARTER CLUTCH	B-08		
CARRIER	F-05	DIFFERENTIAL LOCK	D-14	FRONT WHEEL BRAKE	I-02	KNUCKLE ARM	H-05	REAR BOX					
CLUTCH	D-03	ELECTRICAL											